


2020 Air Compressor Mount Instructions

- 1) remove the relay box off the bracket and remove the two 12mm bolts holding the bracket



- 2) you will need to remove/cut off the arm that hold the bracket too the fender wall. I used a die grinder and filed the edges down

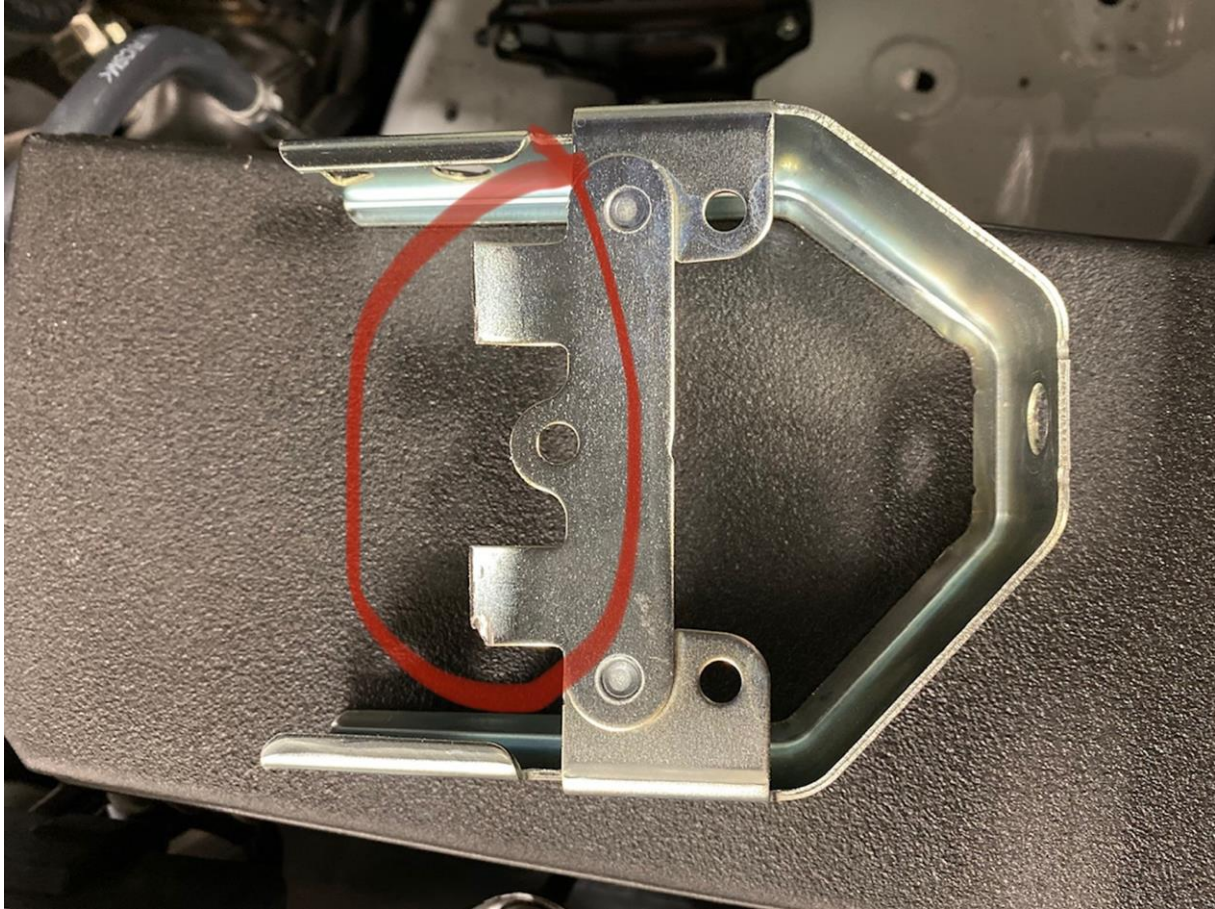

- 3) You will need to drill a new hole into the bracket to fit the factory 12mm bolt though it. I drilled the left hand side of the bracket shown above and drill the hole closer too the bent it will allow you to use a 12mm with a swivel to secure the bracket back down with the relay box secure back to the bracket



- 4) Re install the relay box too the bracket and turn the relay box side ways. screw the factory 12mm bolt back into the bottom hole that secured the bracket. It will sit close to the fuse box but won't rub against it







5) install the tray to the 2 factory holes on the side and 3 on the wheel arch holes



I did notice that when installing the single arb compressor only 3 bolts have holes the 4th bolt is covered up by the leg part that uses 4 Allen bread bolts.

