


BED CAB MOLLE

2022-2023/TOYOTA TUNDRA

R2200TTUNBCM

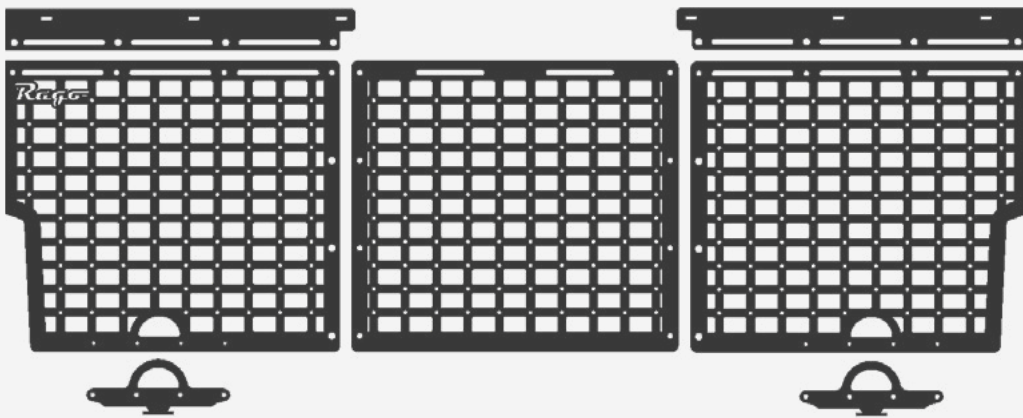

TOOLS REQUIRED

- 7/16 wrench
- T55, T30, 5/16, 7/32 Hex

SKILL LEVEL

- Easy

TIME REQUIRED

- Approximately 30 Minutes

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service: 830-896-7571
Rago Fabrication is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the


performance of these components and the safety of the vehicle. Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

***ALWAYS WEAR EYE PROTECTION
WHEN OPERATING POWER TOOLS***

HARDWARE

A.

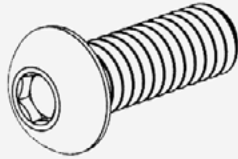

1/4-20 X 3/4" BUTTON HEAD

QTY: 8


A1.



1/4" FLAT WASHER

QTY: 8

B.

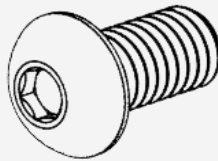

3/8-16 X 3/4" BUTTON HEAD

QTY: 14

B1.



3/8" FLAT WASHER

QTY: 14

Reference this page throughout the install



□ STEP 1

Remove the bed rail hardware one side at a time using a (T30). (You will be installing one side at a time so do not fully remove the bed rail/Keep hardware for installation)



STEP 2

Remove bed frame bolts using a (T55). (Keep hardware for installation)




□ STEP 3

Slip one of the top brackets behind the bed rail as shown below with the hardware removed from **step 1** using a (T30). (Repeat on other side by following **step 1**)

DRIVER




PASSENGER



□ STEP 4

Install the bottom mounting brackets as shown below with hardware **(A, A1)** using a **(7/16 wrench)** and a **(5/16 hex)**.

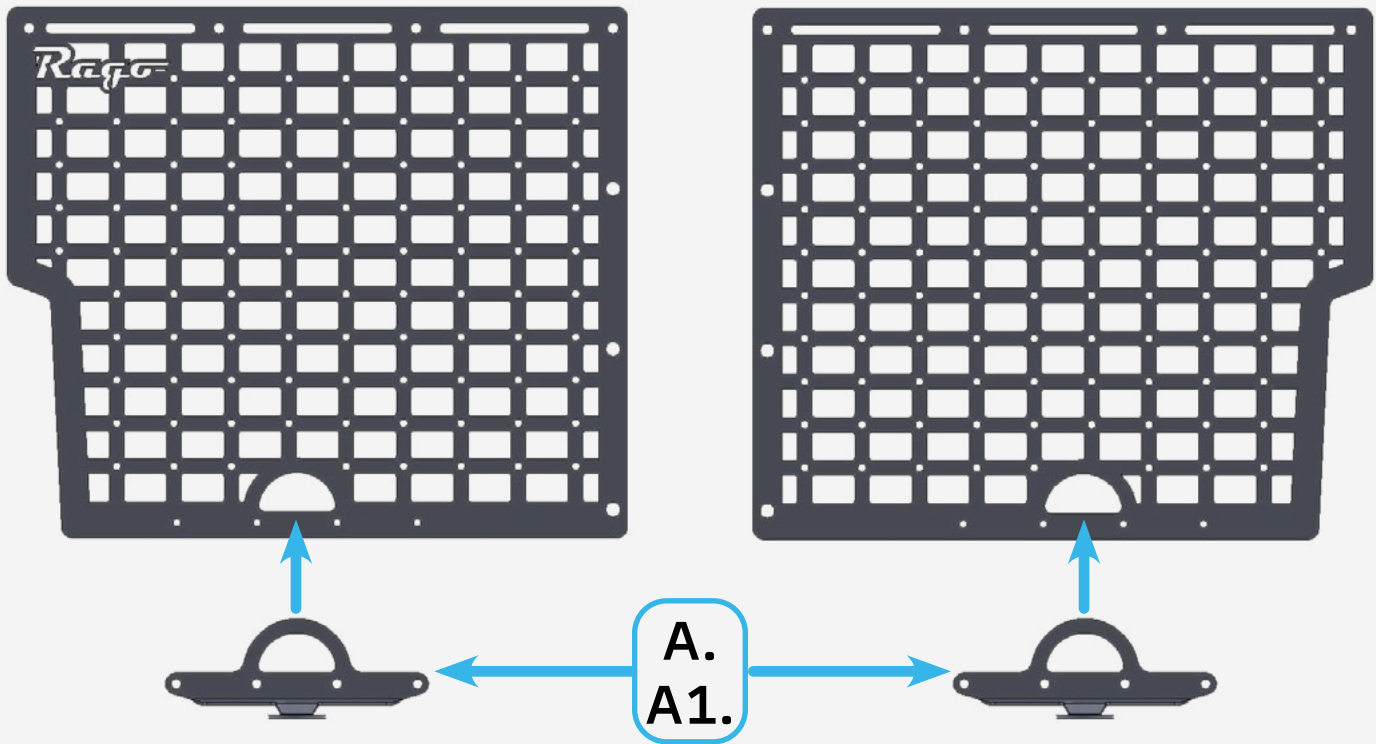

STEP 5

Install the driver and passenger side molle panels by using hardware **(B, B1)** with a **(7/32 torx)**.





□ STEP 6

Install the hardware removed from **step 2** using a (T55).



STEP 7

Install the middle molle panel using hardware (**B, B1**) with a (7/32 torx).

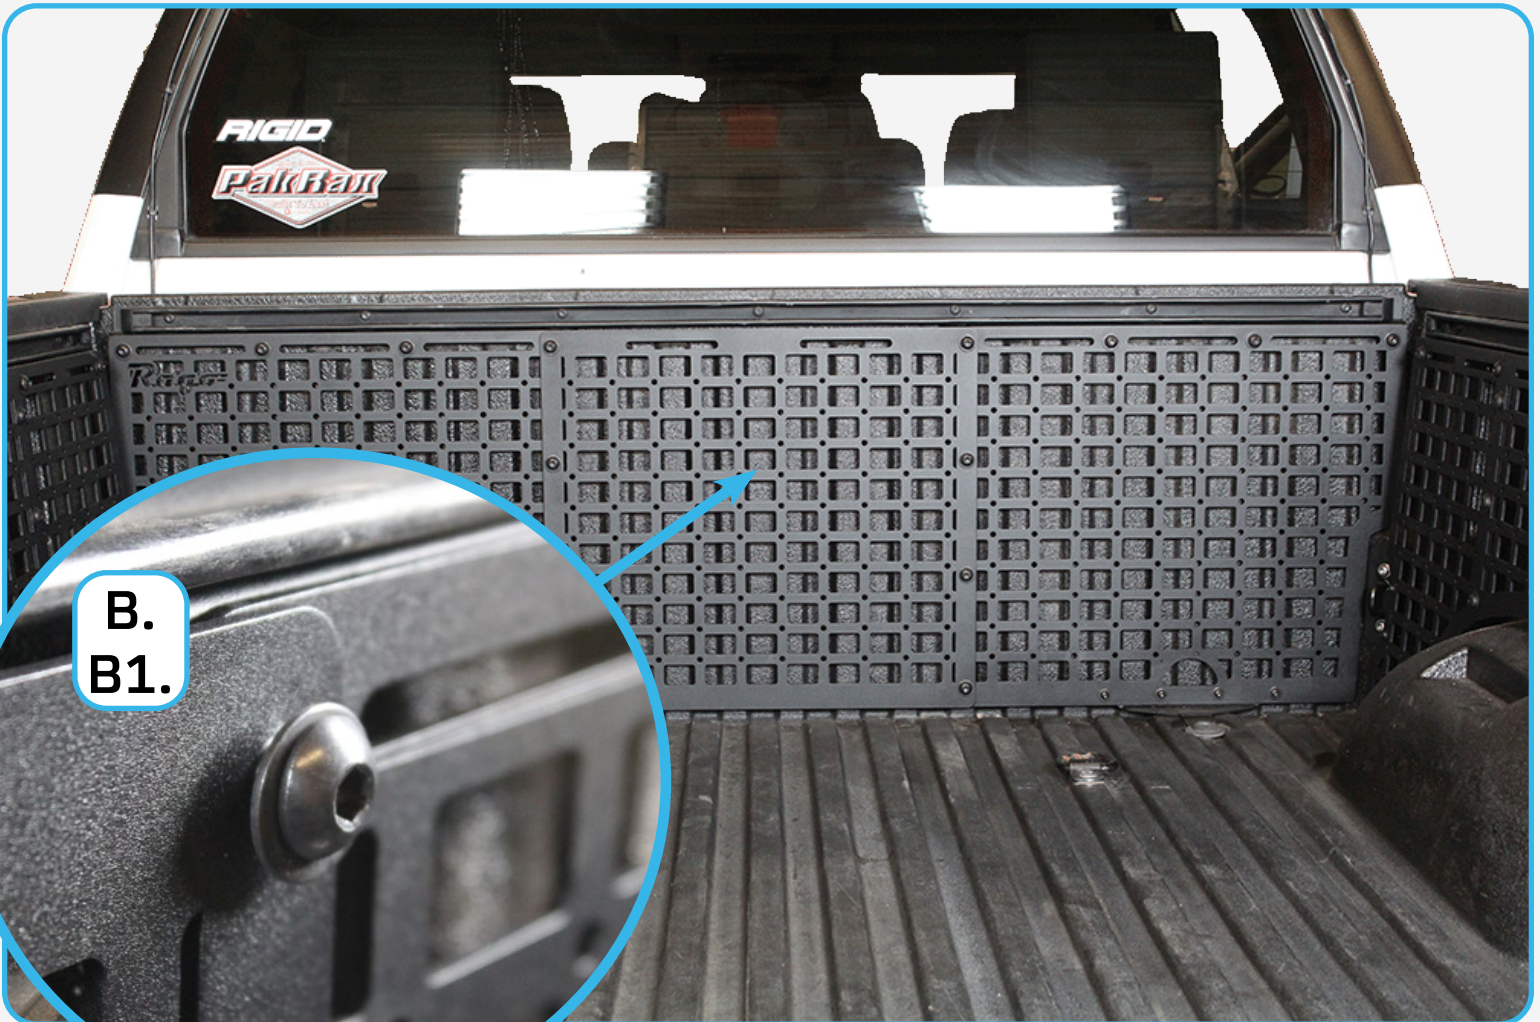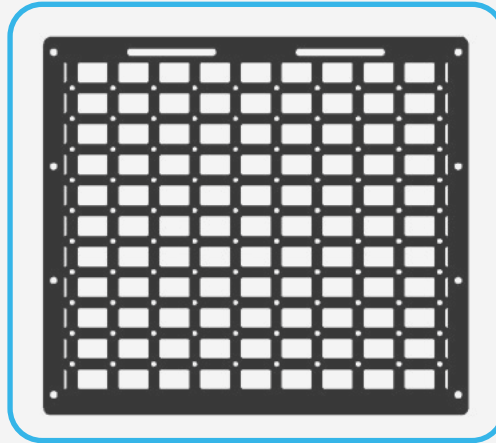

B.
B1.

STEP 8

Double check all hardware and fitment for security.

Enjoy your new Rago Bed Cab Molle.

