

ELITE MICRO UTILITY LIGHTS

UNIVERSAL

BE1EW9WRL



TOOLS REQUIRED

- #4 allen tool
- 10mm Wrench
- Safety Glasses

SKILL LEVEL

- Novice/Intermediate
 - 1 (you)
- Little skill level required, you can easily install it by yourself

TIME REQUIRED

- .5 Hours

Time to install this should only take about half Hour.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit — Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.


HARDWARE INCLUDED

- (4) M6x25mm Bolts
- (4) M6 Nylon Lock Nuts



STEP 1 | Place the Micro Elite Utility light in your desired location. For this install we are mounting the utility light to the inner fender.

The utility light can be placed in any direction you wish.

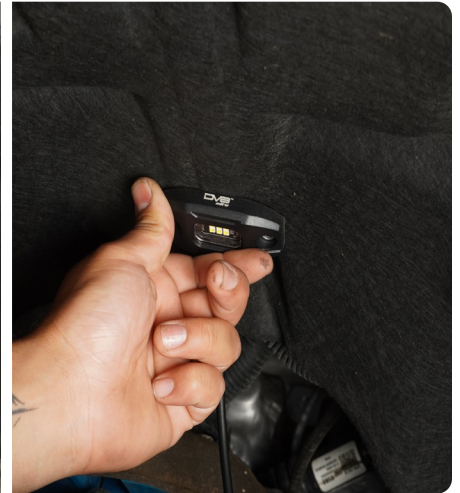

STEP 2 | Once you have decided on a mounting location and placement orientation, hold up the optional paper backing to the panel you wish to mount the light to. Use a marker to mark the holes that will need to be drilled out.



INSTALLATION MANUAL

STEP 3 | On this install, we used a pick to punch a hole through the fabric inner fender. If you are installing the light onto a steel or hard plastic panel, use a 17/32 drill bit to drill the two mounting holes.



STEP 4 | Place the provided backing on to the back of the light.



STEP 5 | Using the provided M6x25mm allen head hardware, secure the utility light in place using a #4 allen tool and a 10mm wrench.



INSTALLATION MANUAL

STEP 6 | Route the wiring back and into the engine bay, ensuring the wiring is clear of any rotating or hot engine components.



STEP 7 | Connect the light to your power supply. For this install we used the DV8 4 way harness and 60 amp switch wiring harness bundle, part numbers UNWH-01 & UNWH-02.



INSTALLATION MANUAL

STEP 8 | Double check that all hardware is secure.

Congratulations, installation of the DV8 Micro Elite Utility Lights is not complete.

