


MOLLE STORAGE PANEL SYSTEM | PAIR 2010-2023/TOYOTA 4RUNNER R1017T4RUMSP-DM

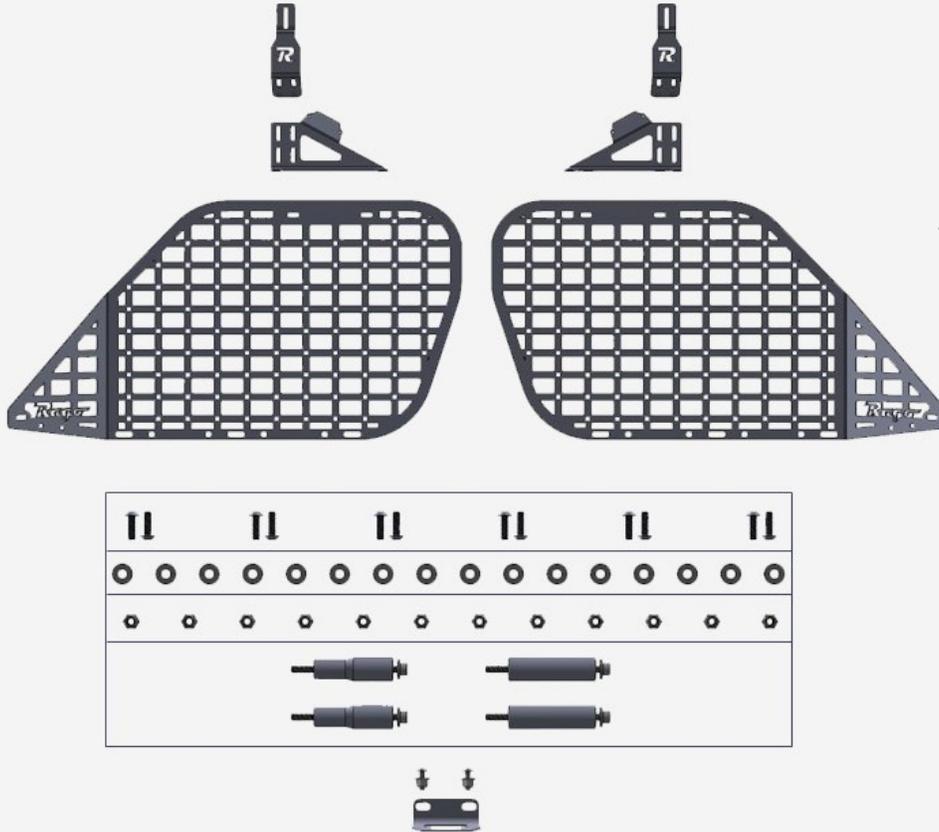

TOOLS REQUIRED

- 10mm, 7/16 sockets
- 10mm, 7/16 wrenches
- Pushpin Puller or Flathead Screwdriver
- Phillips Screwdriver
- 5/32, 5mm Hex

SKILL LEVEL

- Easy

TIME REQUIRED

- Approximately 1 Hour

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service: 830-896-7571
Rago Fabrication is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the


performance of these components and the safety of the vehicle. Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

ALWAYS WEAR EYE PROTECTION WHEN OPERATING POWER TOOLS



□ STEP 1

Remove the parts shown below using a (flat head/Phillips head) and a (10mm ratchet). Then twist the hook closest to the tailgate clockwise and pull. (Repeat on other side) (*Keep the hardware removed from the coat hangers*).

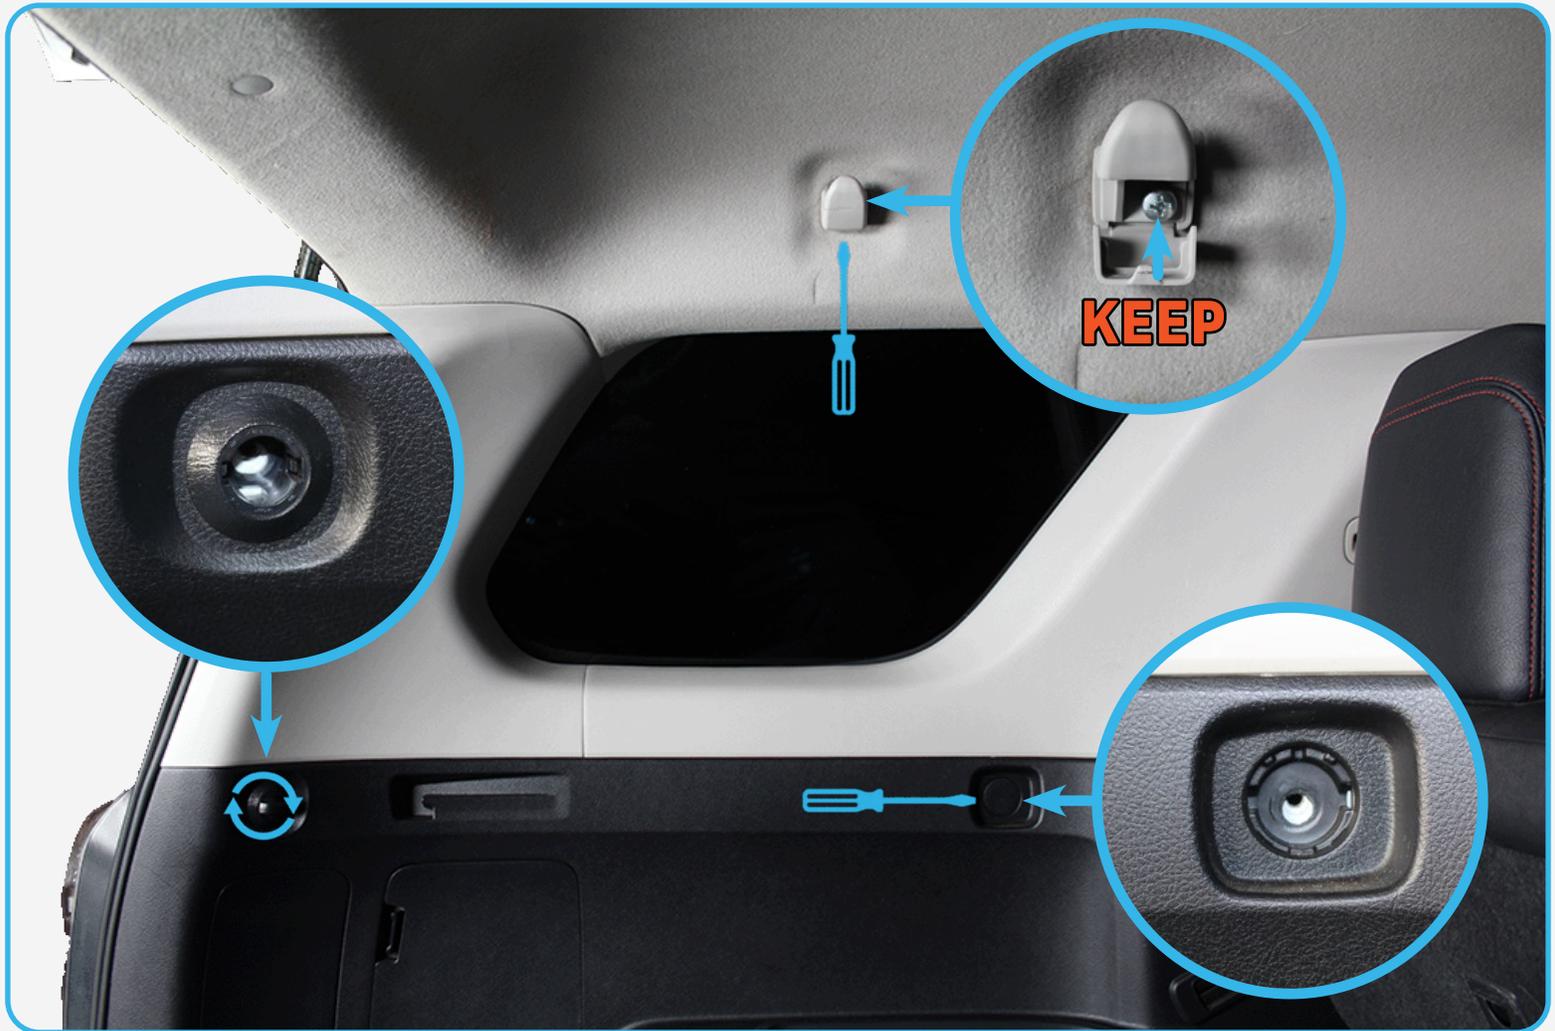


□ STEP 2

Install the provided 2.5 and 3 inch machined spacers into the existing threaded holes by just twisting until tight. (*Wider spacer is installed in the hole closest to the tail gate, skinny spacer on the inside*).

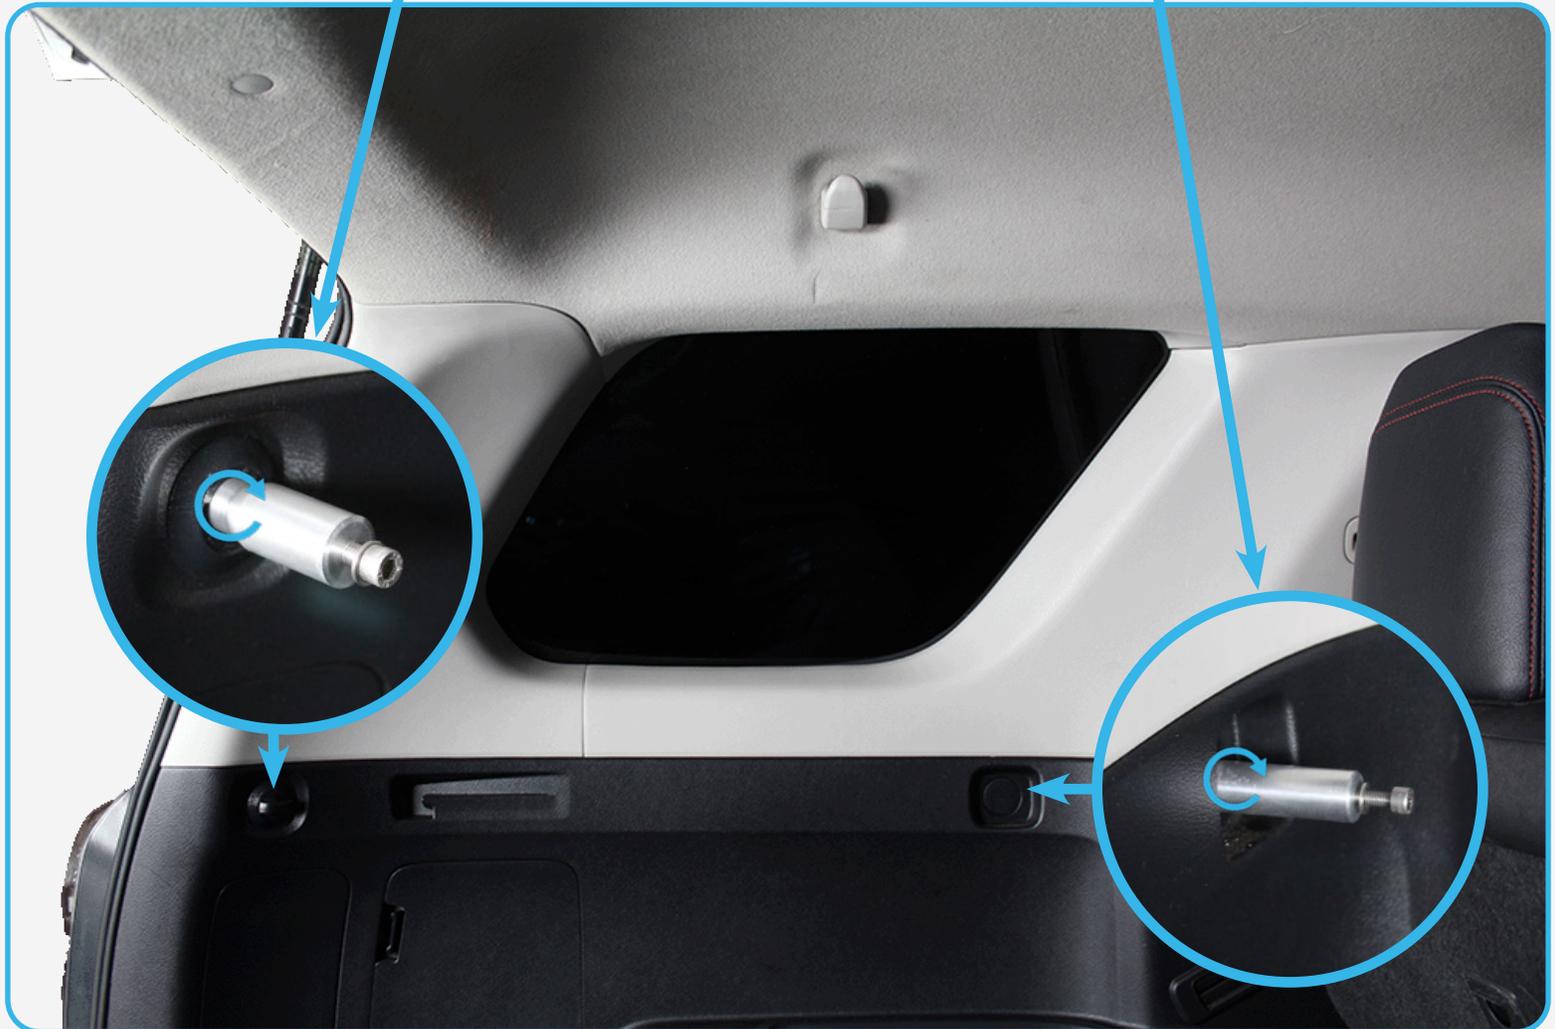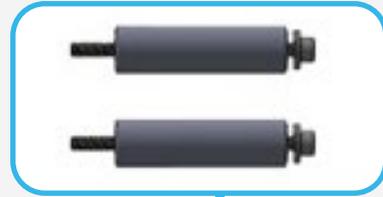


□ STEP 3

Install the provided brackets with the 1/4-20 button head bolts, washers, and nylon lock nut using a (7/16 ratchet) and (5/32 hex).

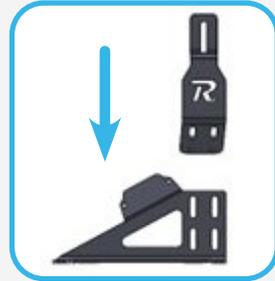

□ STEP 4

You can now install the panel using the Phillips screw removed from **step 1** for the top bracket. Then install the provided M6 bolts for the spacers using a (5mm hex). *(Hold the panel with one hand while tightening the M6 bolts to avoid stripping the bolt).*

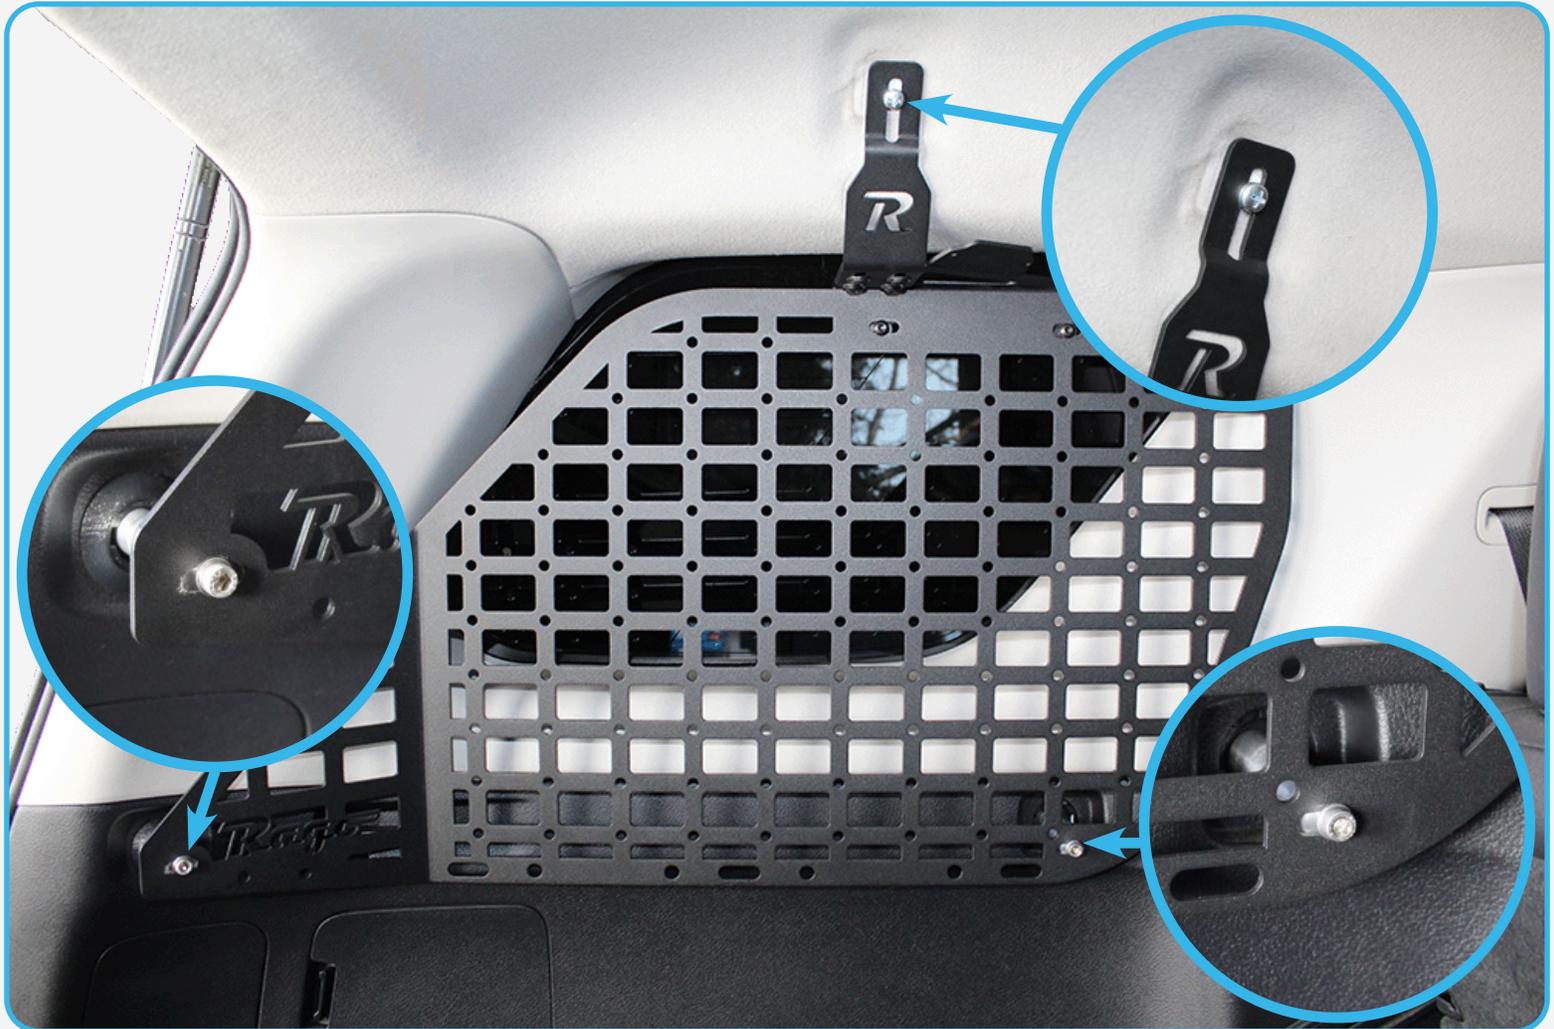

□ STEP 5

Install the bottle opener using the provided 1/4-20 button head bolts, washers, and nylon lock nut with a (7/16 ratchet) and (5/32 hex). *(This is optional and can be installed on either panel).*



STEP 6

Double check all hardware and fitment for security.

Enjoy your new Rago Molle Storage Panel System.

