



BED SIDE MOLLE 2024/TOYOTA TACOMA AC6703201NA, AC6703301NA

DRIVER AC6703201NA

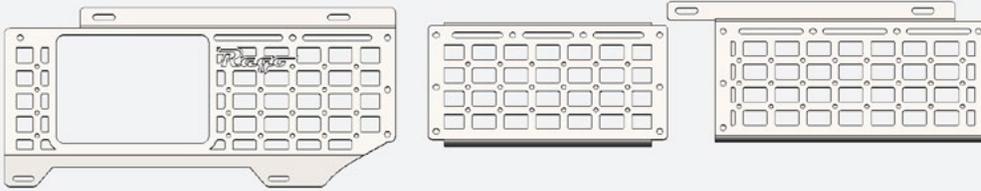

PASSENGER AC6703301NA

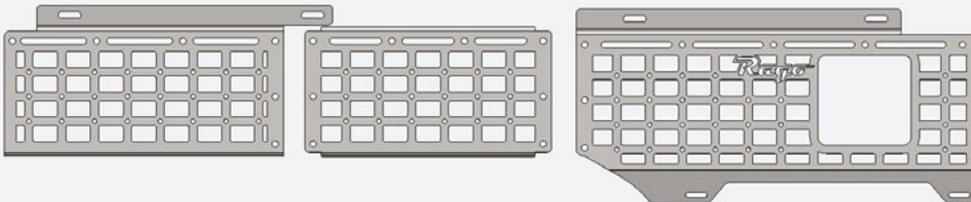

TOOLS REQUIRED

- 9/16 socket
- 9/16 wrench
- 5/32, 7/32 Hex
- T30 Torx
- Uni-bit
- Drill
- Rivet Nut Tool
- Marker

SKILL LEVEL

- Easy

TIME REQUIRED

- Approximately 30 Minutes

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service: 830-896-7571
Rago Fabrication is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the


performance of these components and the safety of the vehicle. Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

***ALWAYS WEAR EYE PROTECTION
WHEN OPERATING POWER TOOLS***

DRIVER HARDWARE


A.

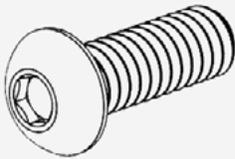

3/8-16 X 3/4" BUTTON HEAD

QTY: 6

A1.

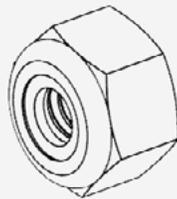

3/8-16" NYLON LOCK NUT

QTY: 6

A2.



3/8" FLAT WASHER

QTY: 6

B.



1/4-20 X 1" BUTTON HEAD BOLT

QTY: 2


B1.



M6 FLAT WASHER

QTY: 2

B2.

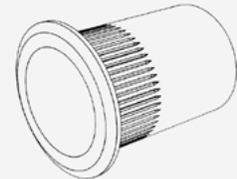

1/4-20" RIVET NUT

QTY: 2

Reference this page throughout the install





□ STEP 1

Remove the OEM hardware for the bed side rails using a (T30 Torx).



□ STEP 2

Assemble the molle panel using hardware (**A, A1, A2**) with a (7/32 allen) and (9/16 wrench).

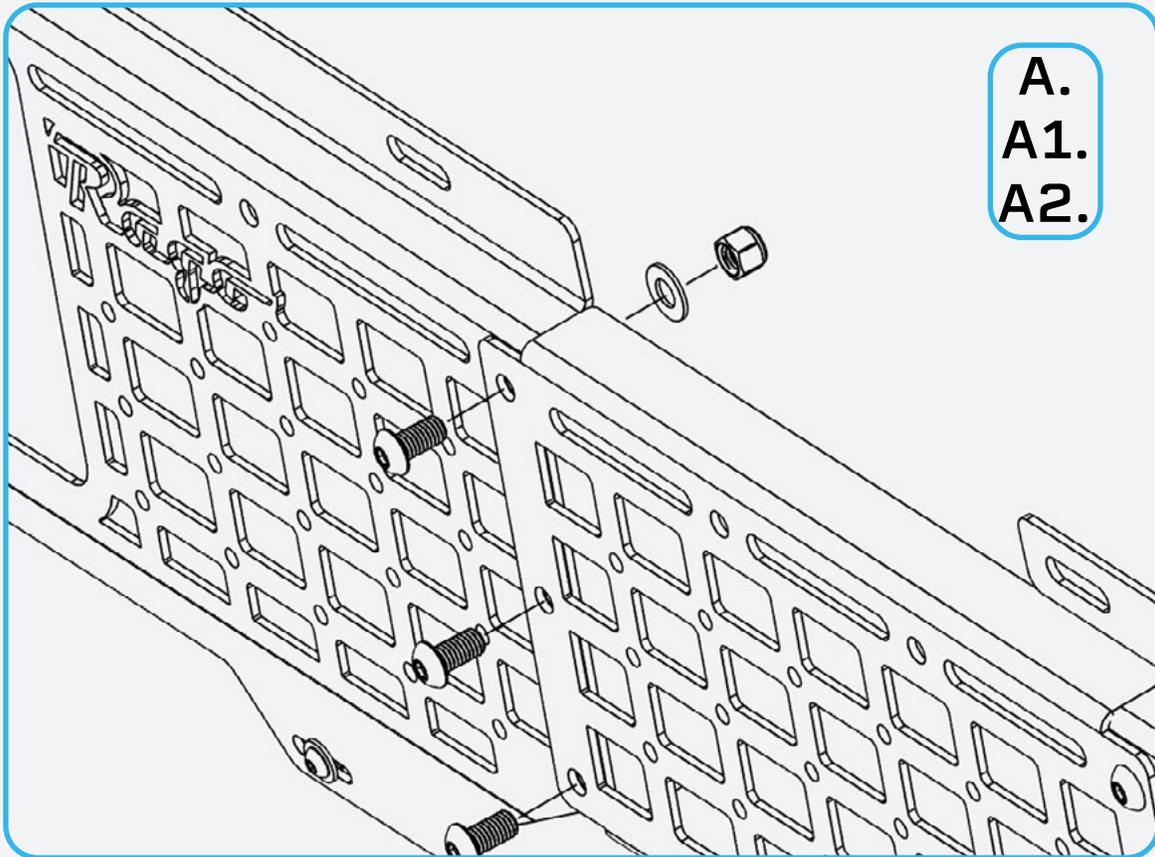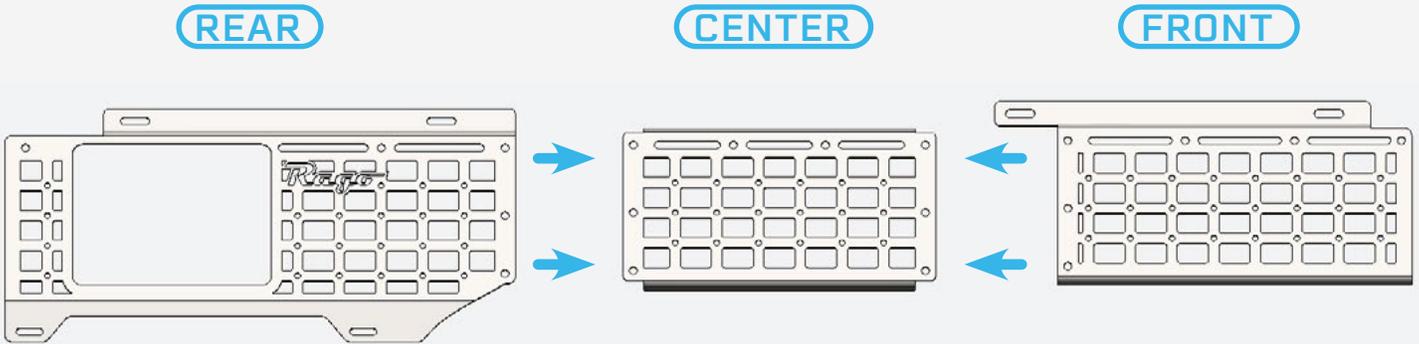

□ STEP 3

Install the bed side rail with the bed side molle using a (T30 Torx).





□ STEP 4

Mark the bottom holes and remove the side molle.




□ STEP 5

Drill a 7/16 hole using a (Uni-Bit) and install the provided rivet nuts (**B2**) with a (Rivet nut tool). (If you do not have a rivet nut tool refer to **step 6**)

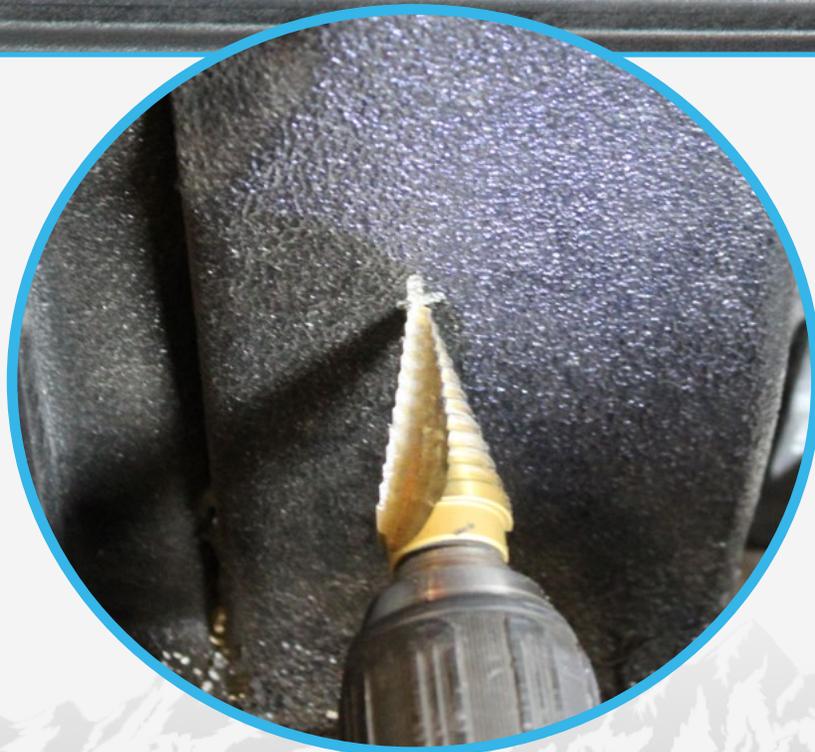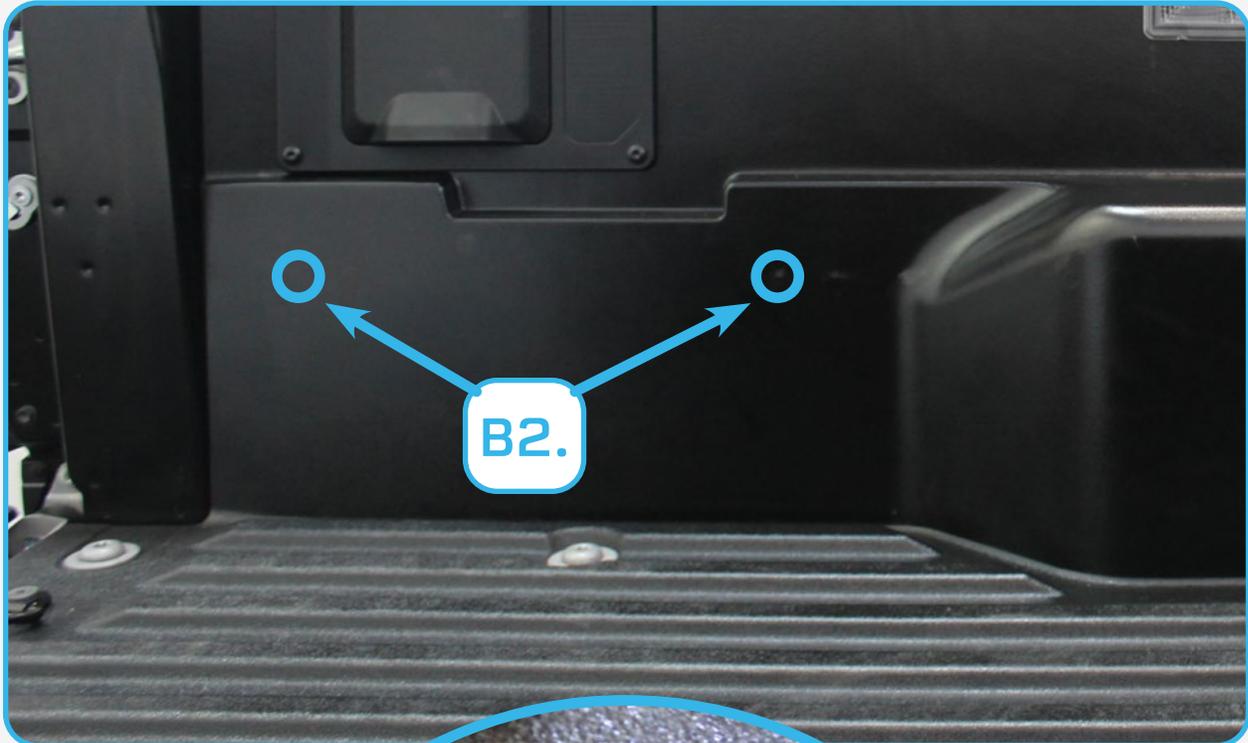

□ STEP 6

If you do not have a rivet nut tool, use a 1/4-20 x 3/4 hex head bolt, a 1/4 washer, and a 3/8 nut to install the rivet nuts (B2). Tighten using a (9/16 wrench) and a (7/16 socket) on an impact. **(Hardware not included)**

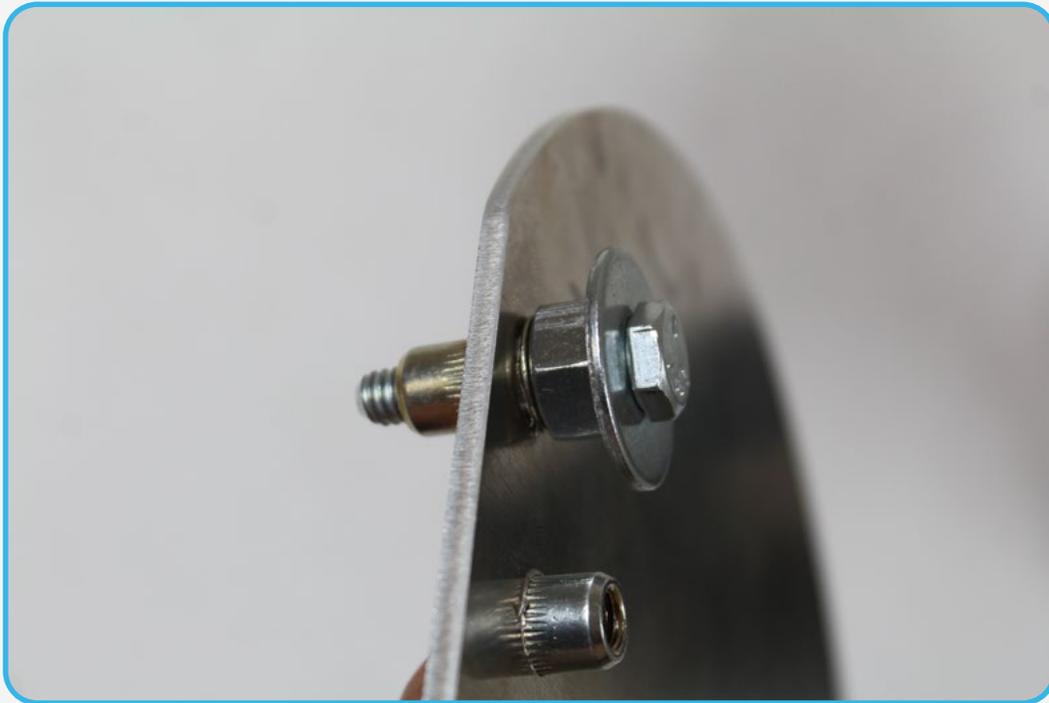



□ STEP 7

Install the bed side rail with the bed side molle using a (T30 Torx).




STEP 8

Install the provided **(B, B1)** hardware with the riv nuts installed on step 5 using a **(5/32 allen)**.

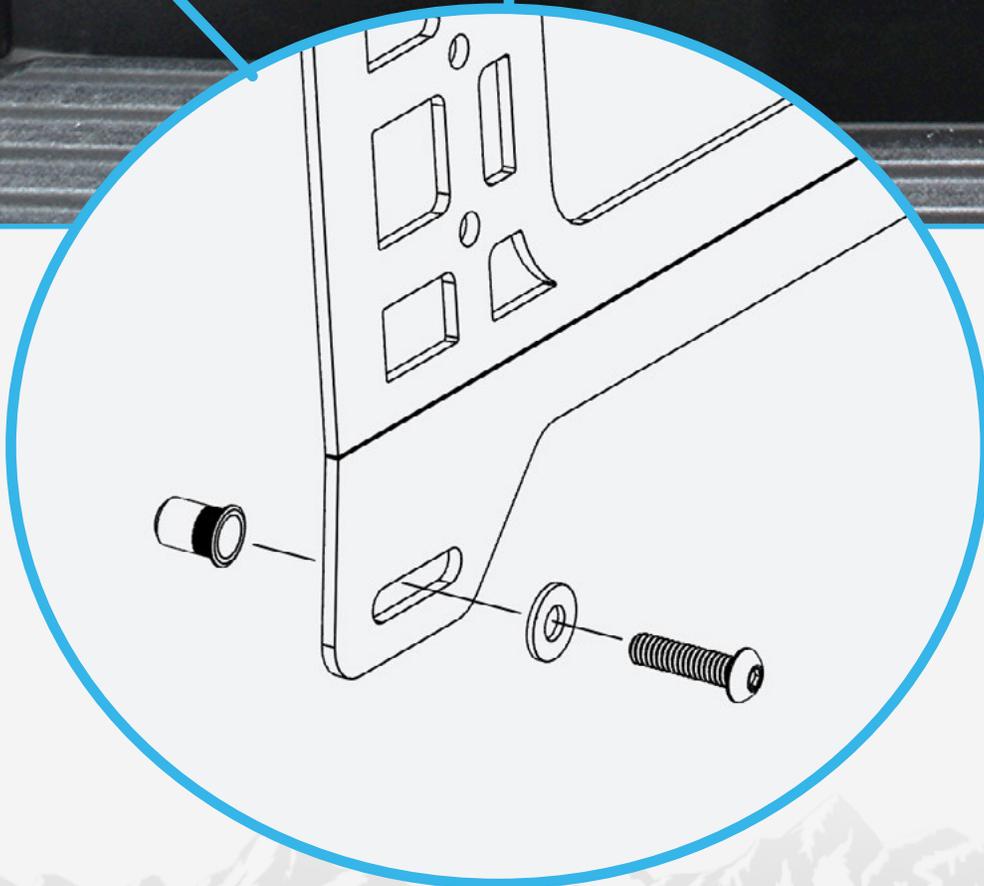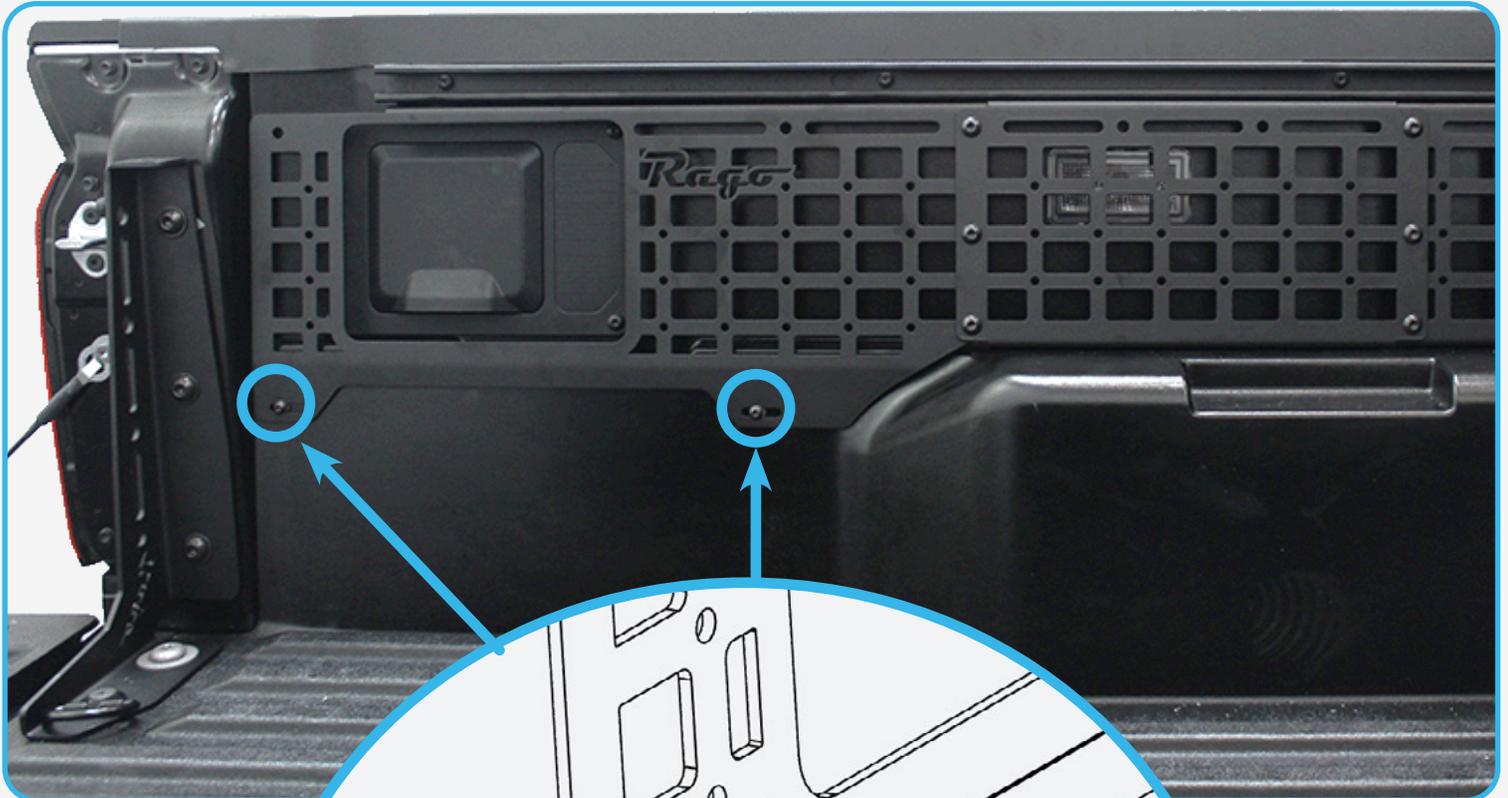

PASSENGER HARDWARE


A.

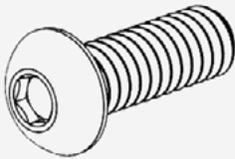

3/8-16 X 3/4" BUTTON HEAD

QTY: 6

A1.

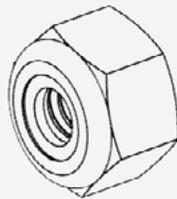

3/8-16" NYLON LOCK NUT

QTY: 6

A2.



3/8" FLAT WASHER

QTY: 6

B.



1/4-20 X 1" BUTTON HEAD BOLT

QTY: 2


B1.



M6 FLAT WASHER

QTY: 2

B2.

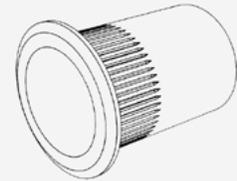

1/4-20" RIVET NUT

QTY: 2

Reference this page throughout the install



STEP 9

Remove the OEM hardware for the bed side rails using a (T30 Torx).





STEP 10

Remove the 2x bolts holding the storage box as shown below using a (T30 Torx). **Keep hardware**



□ STEP 11

Assemble the molle panel using hardware (**A, A1, A2**) with a (7/32 allen) and (9/16 wrench).

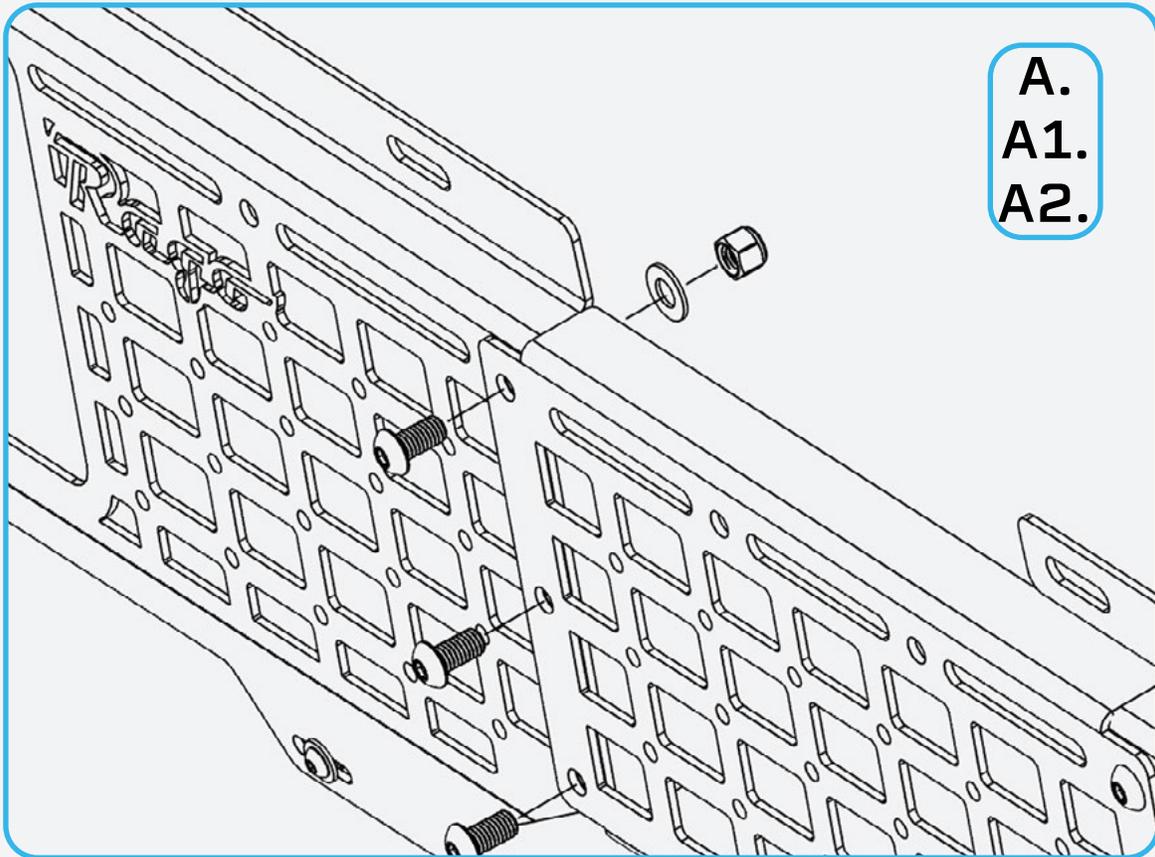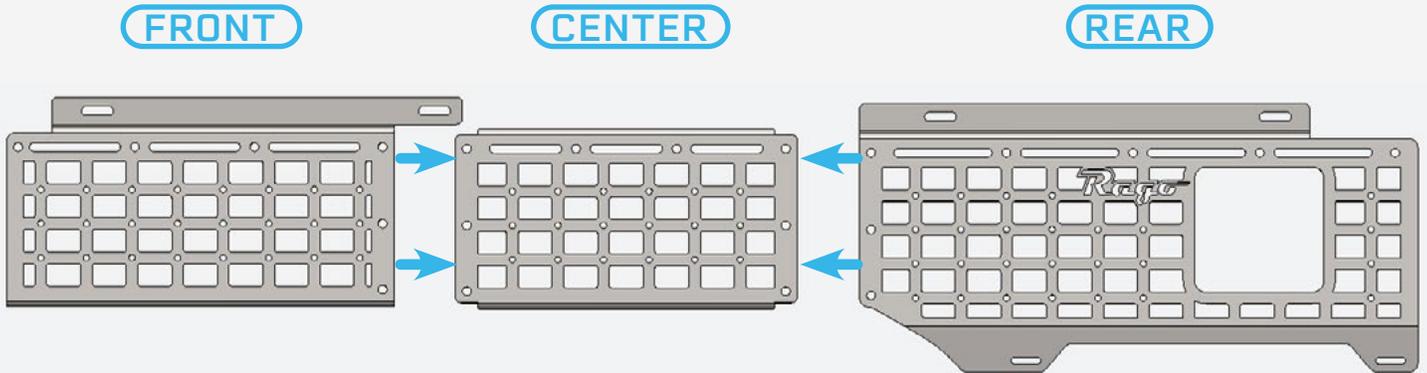

□ STEP 12

Install the OEM hardware for the bed side rails with the bed side molle using a (T30 Torx).



□ STEP 13

Install the 2x bolts holding the storage box as shown below using a (T30 Torx).



STEP 14

Double check all hardware and fitment for security.

Enjoy your new Rago Bed Side Molle.

