




INSTALLATION GUIDE

REAR SHELF

2025-UP/TOYOTA 4RUNNER

AC7103001NA

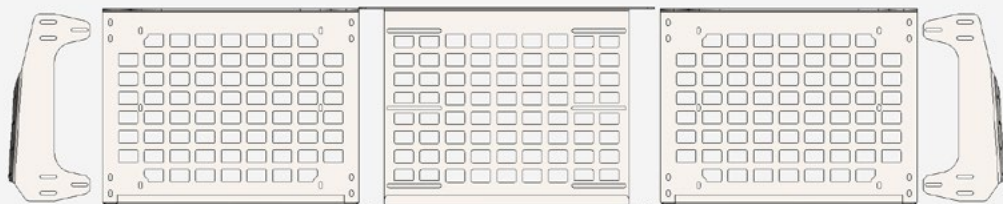

TOOLS REQUIRED

- 7/16 wrenches
- 5/32 Allen



SKILL LEVEL

- Very Easy



TIME REQUIRED

- Approximately 20 Minutes

⚠ WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION ⚠

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service: 830-896-7571

Rago Fabrication is **not** responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the

performance of these components and the safety of the vehicle.


Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

***ALWAYS WEAR EYE PROTECTION
WHEN OPERATING POWER TOOLS***

HARDWARE


A.

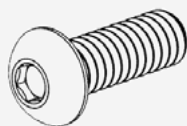

1/4-20 X 1/2" BUTTON HEAD

QTY: 24

A1.

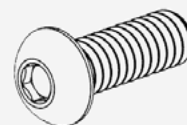

1/4-20 X 3/4" BUTTON HEAD

QTY: 8

B.



1/4" FLAT WASHER

QTY: 32


C.



1/4-20" NYLON JAM NUT

QTY: 24

D.



1/4-20" NYLON LOCK NUT



QTY: 10

Reference this page throughout the install





□ STEP 1

Assemble the **3x** panels as shown below with the **6x (A, B, C)** 1/4" hardware using a (5/32 allen) and a (7/16 wrench). ****Leave loose for adjustments****

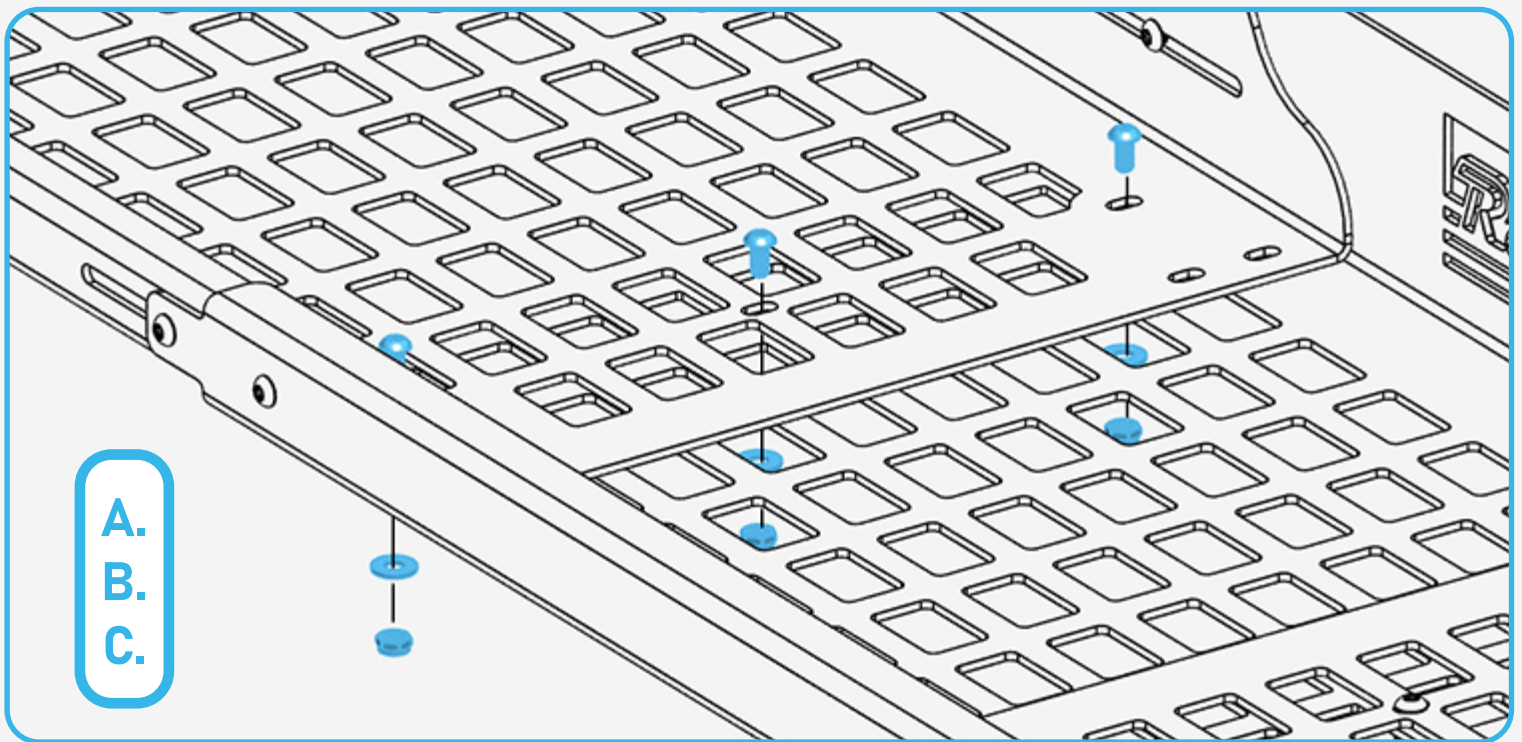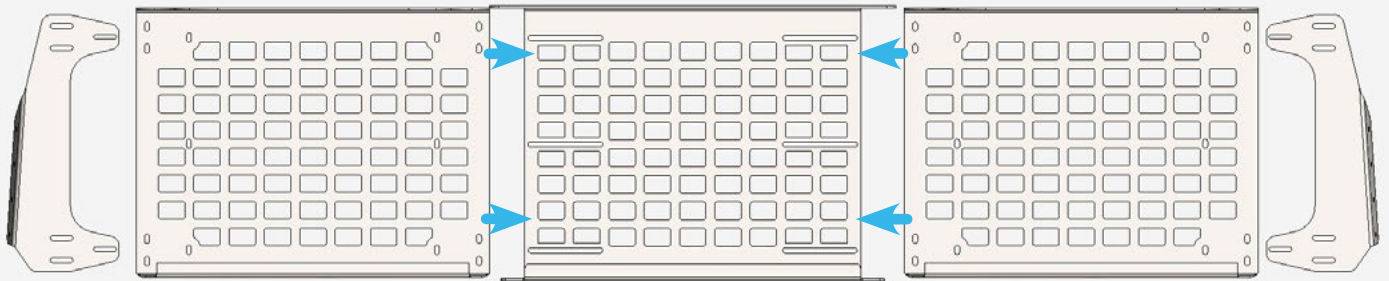

□ STEP 2



Install the provided (A1, B, D) 1/4" hardware as shown below using a (5/32 allen) and a (7/16 wrench). ****Leave loose for adjustments****

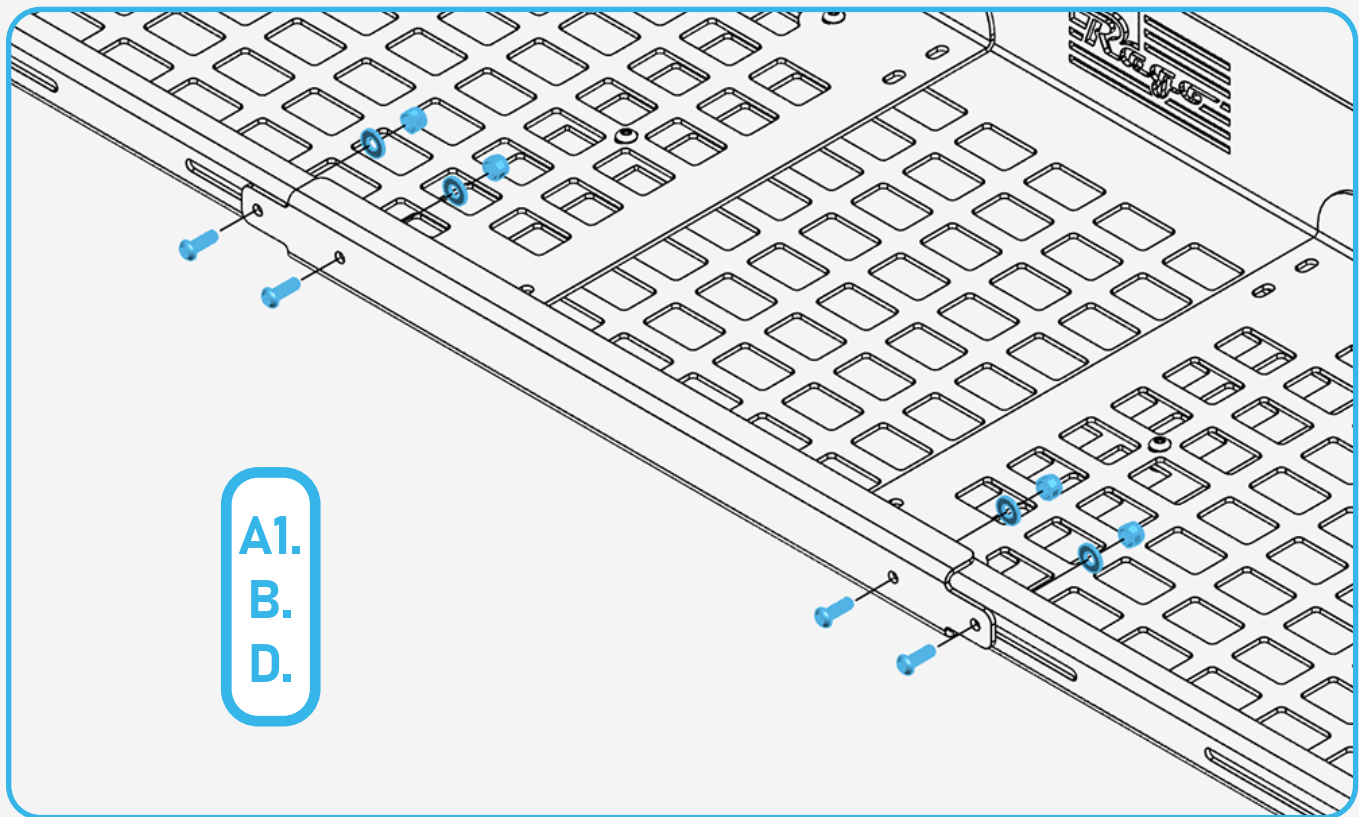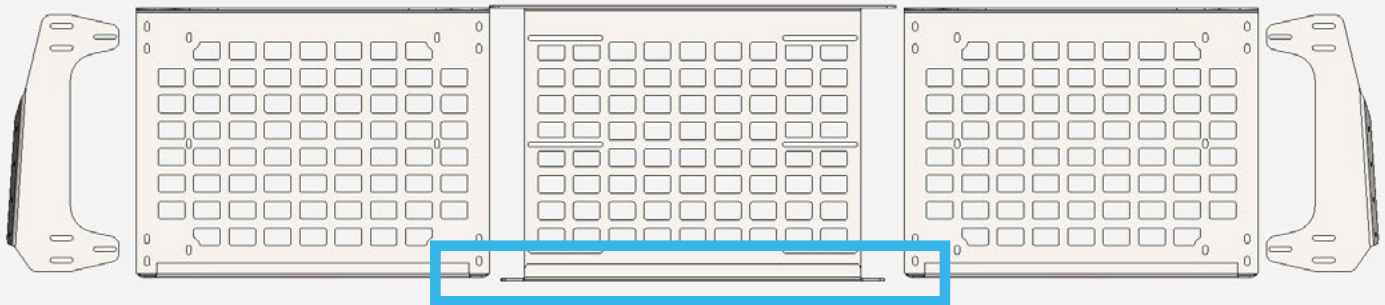

□ STEP 3



Install the 6x (A, B, C) 1/4" hardware as shown below using a (5/32 allen) and a (7/16 wrench).

****Leave loose for adjustments****

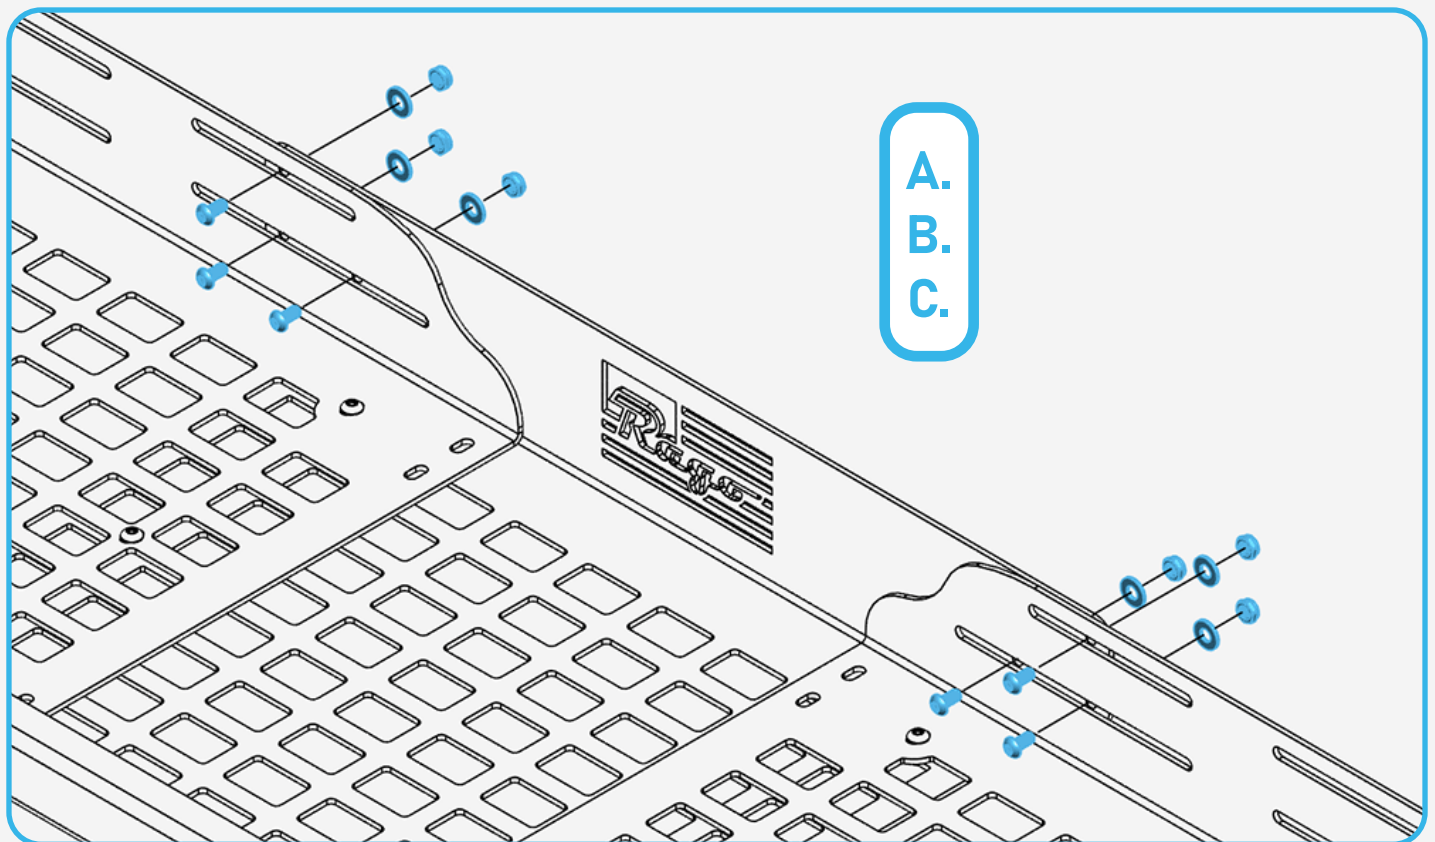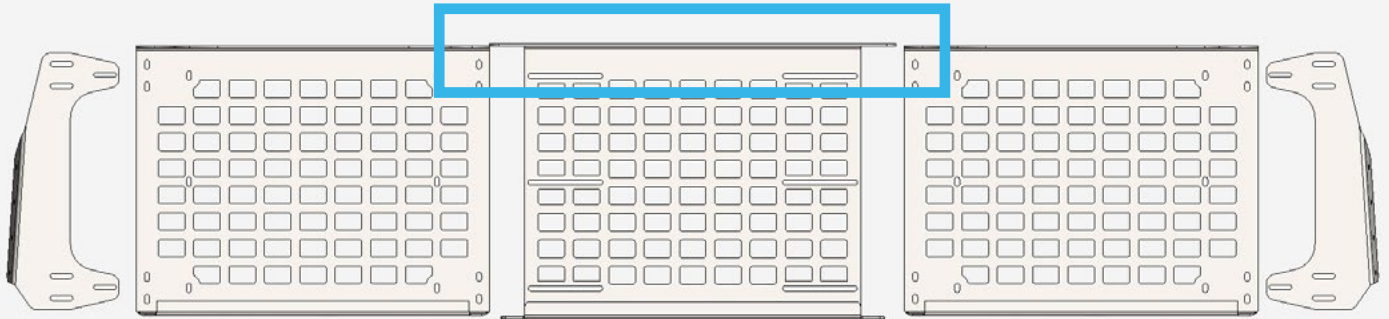


□ STEP 4

Shown below is the suggested positions for top to bottom positions. Install the mounting brackets to the rear MSP's with the provided (A1, B, D) 1/4" hardware using a (5/32 allen) and a (7/16 wrench). ****If you are installing in the very bottom position, use the existing hardware from the rear MSP mounting bracket****

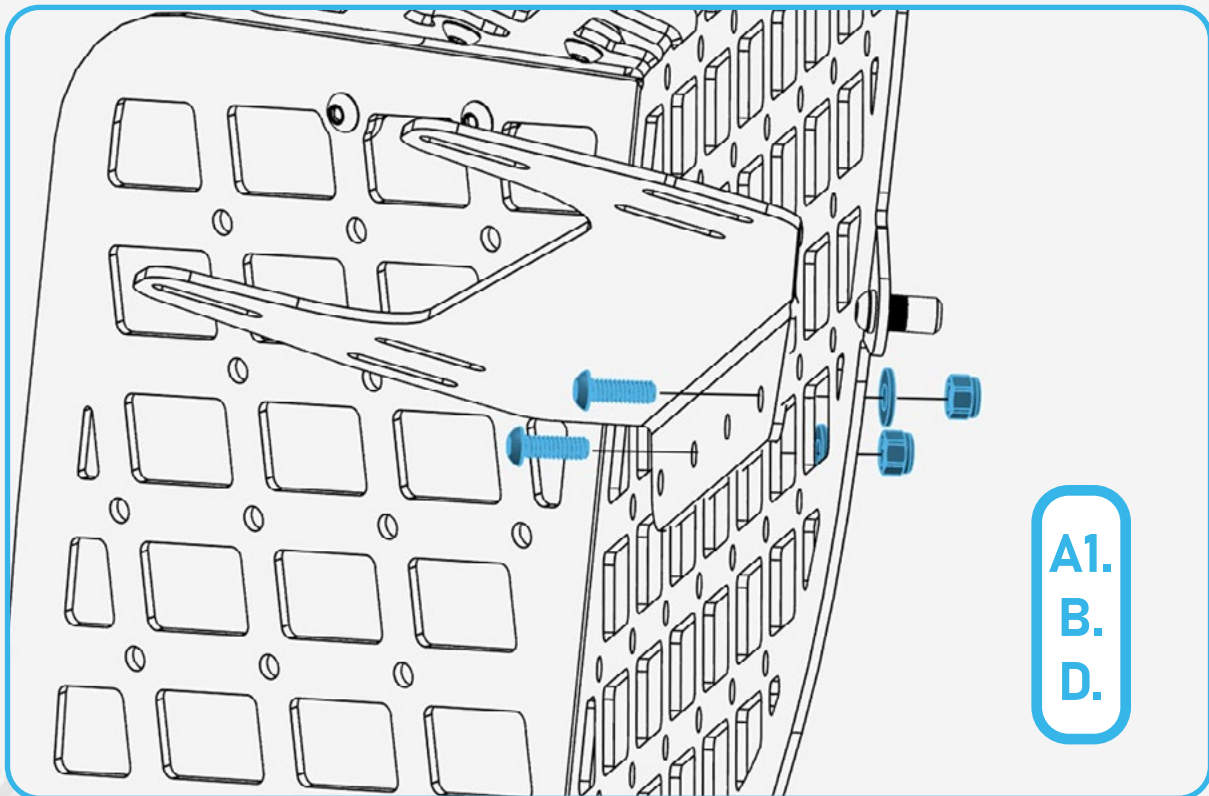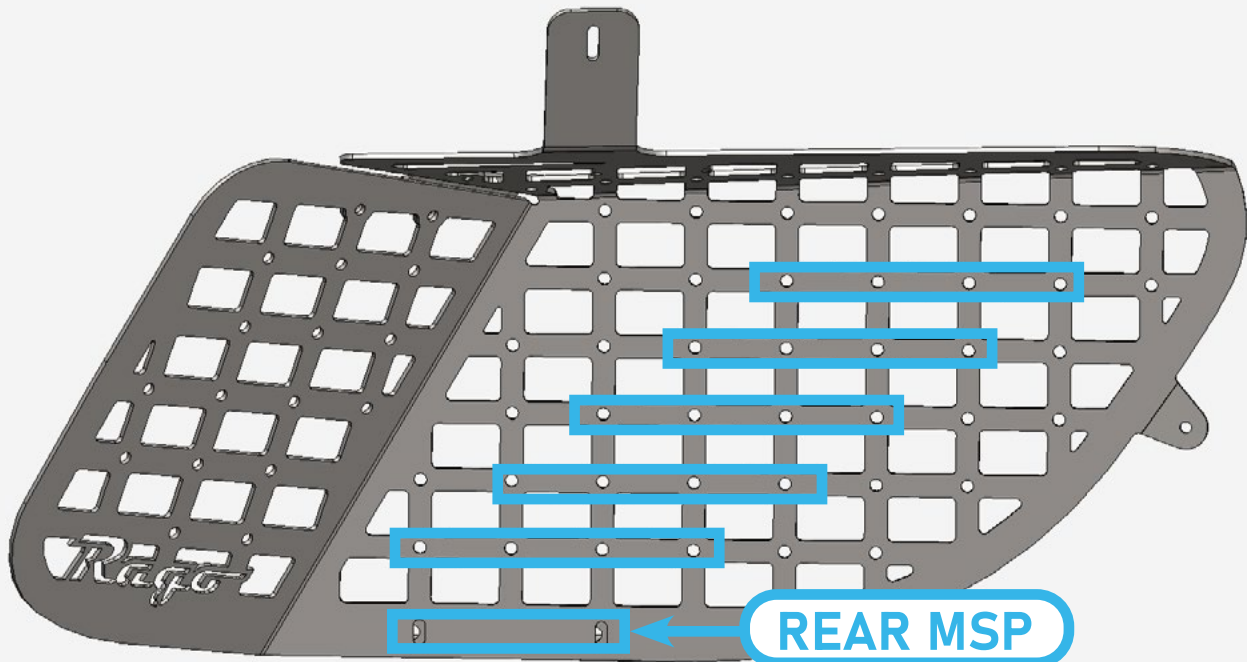



□ STEP 5

Place the shelf onto the brackets, ensure that all holes are aligned and if not, simply adjust the shelf to the desired position.

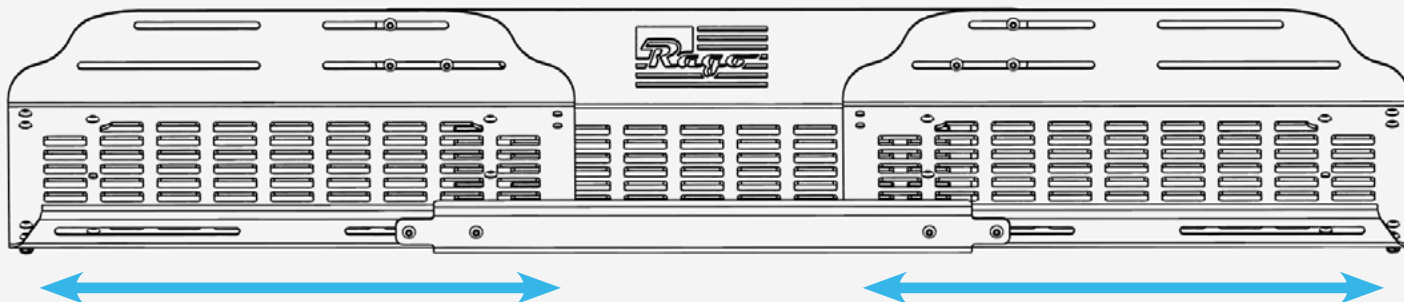


□ STEP 6

Next, Install the provided **(A, B, C)** 1/4" hardware into the mounting brackets installed on **step 4** using a **(5/32 allen)** and a **(7/16 wrench)**.

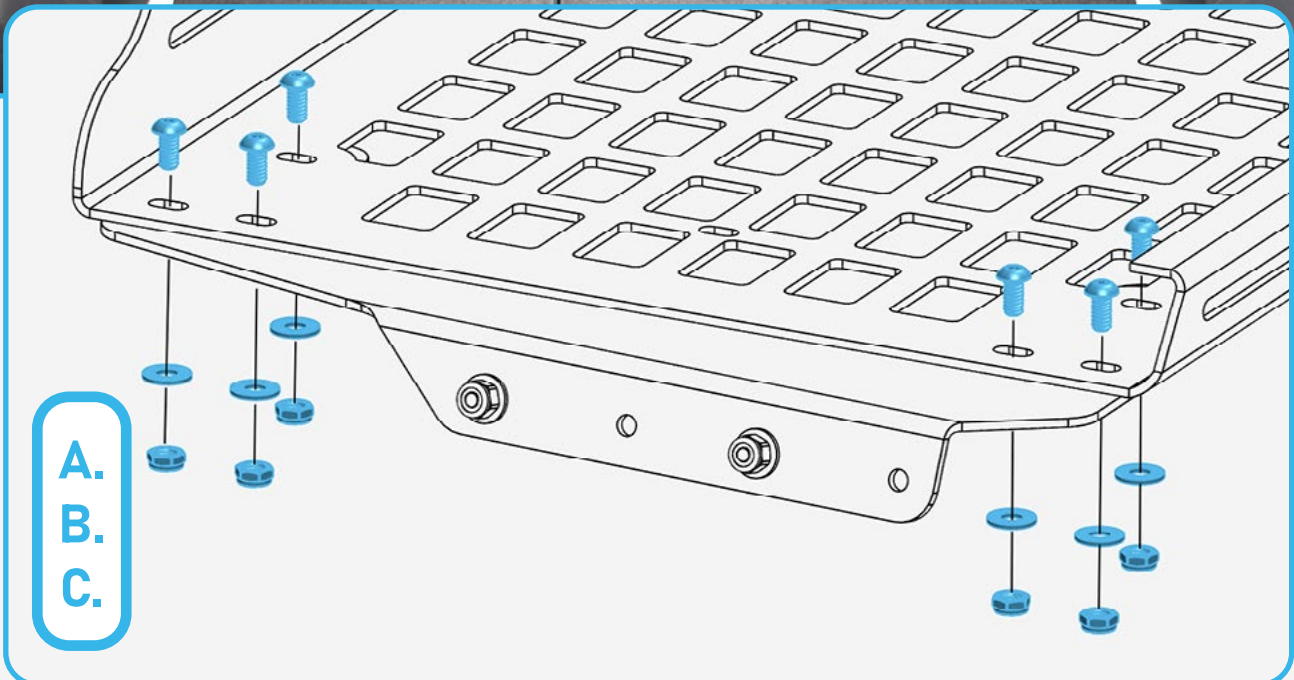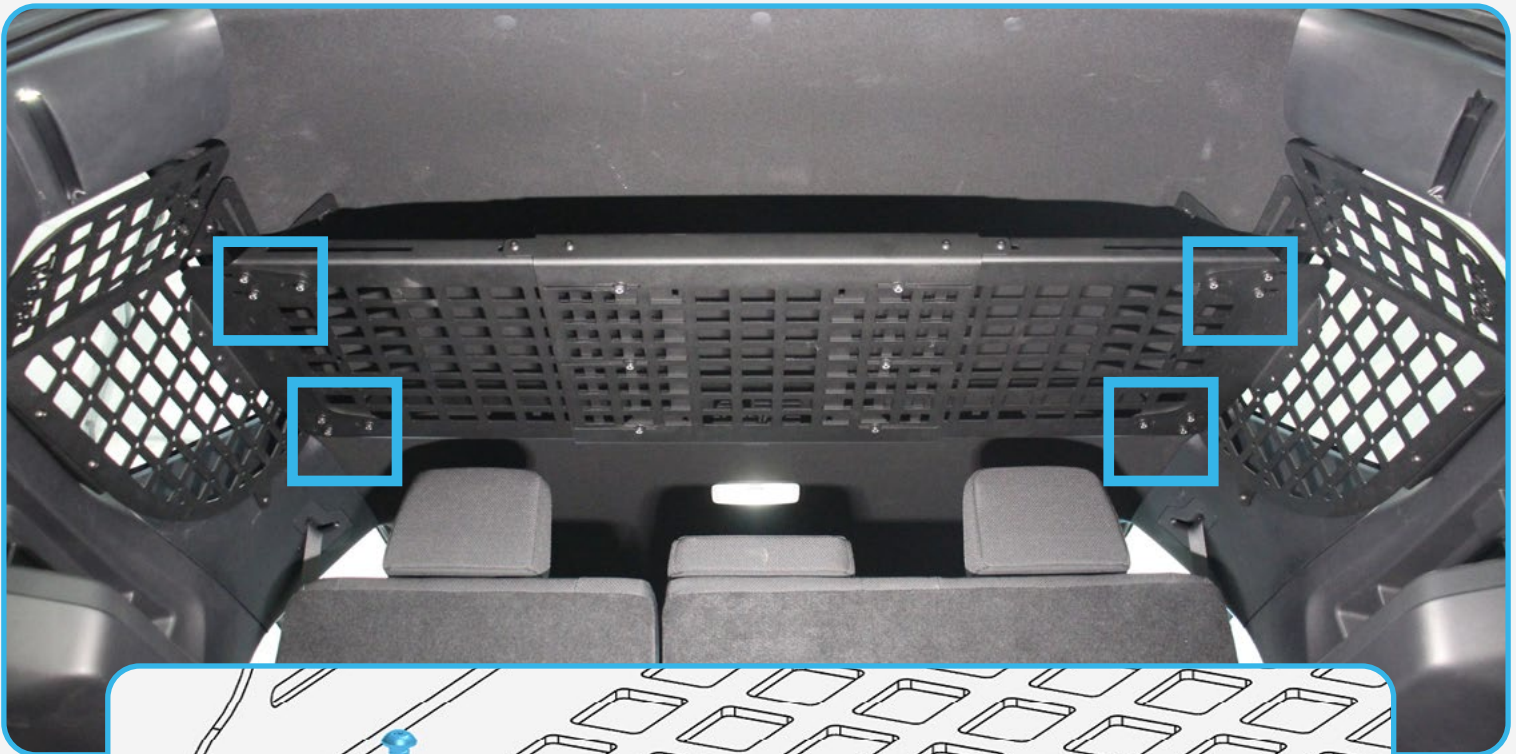

□ STEP 7

Once the shelf is in the desired position, fully tighten all hardware highlighted below that was installed on **steps 1, 2, and 3** using a (5/32 allen) and a (7/16 wrench).

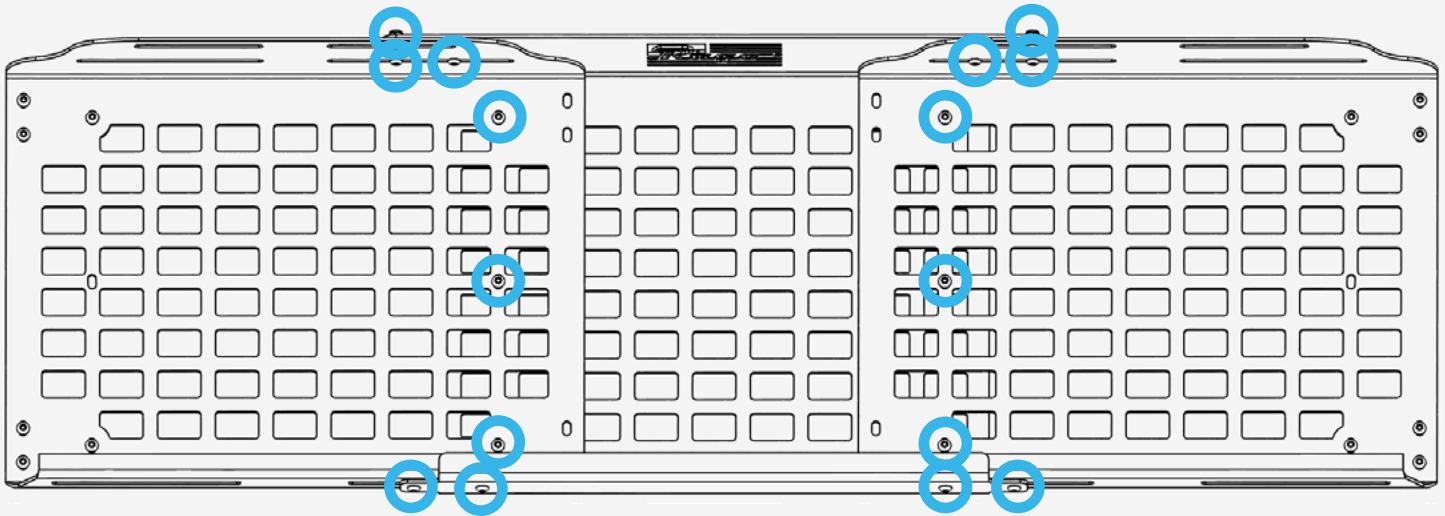

□ STEP 8

Stand back and enjoy your new RAGO Rear Molle Shelf.

Check and re-tighten all mounting bolts after 100 miles and periodically thereafter.

