


REAR SHELF

2019-2024/SUBARU FORESTER

AC8503001NA

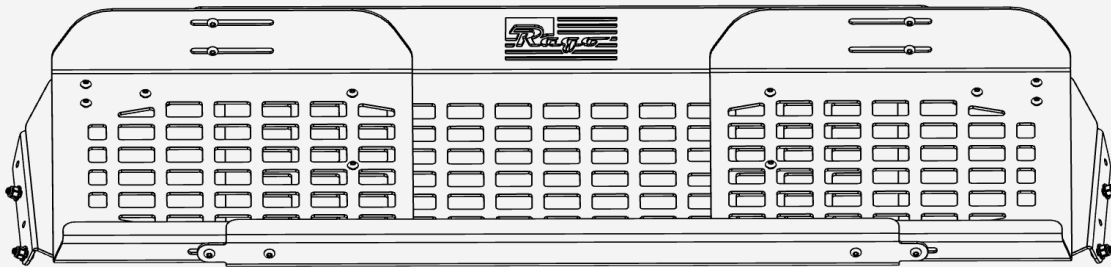


TOOLS REQUIRED

- 7/16 sockets
- 7/16 wrench
- 5/32 Allen



SKILL LEVEL

- Easy



TIME REQUIRED

- Approximately 20 Minutes

⚠️ WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION ⚠️

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service: 830-896-7571
Rago Fabrication is **not** responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the

performance of these components and the safety of the vehicle. Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

ALWAYS WEAR EYE PROTECTION WHEN OPERATING POWER TOOLS

HARDWARE


A.



1/4-20 X 1/2" BUTTON HEAD BOLT

QTY: 12

A1.



1/4-20 X 3/4" BUTTON HEAD BOLT

QTY: 8


A2.



1/4-20 X 3/4" BUTTON HEAD BOLT

QTY: 30

A3.



1/4-20 NYLON LOCK NUT

QTY: 8

A4.





1/4-20 NYLON JAM LOCK NUT

QTY: 22





□ STEP 1

Using the provided 1/4" hardware (A1, A2, A3), using a (5/32 allen) and a (7/16 wrench). ****Leave loose for adjustments****

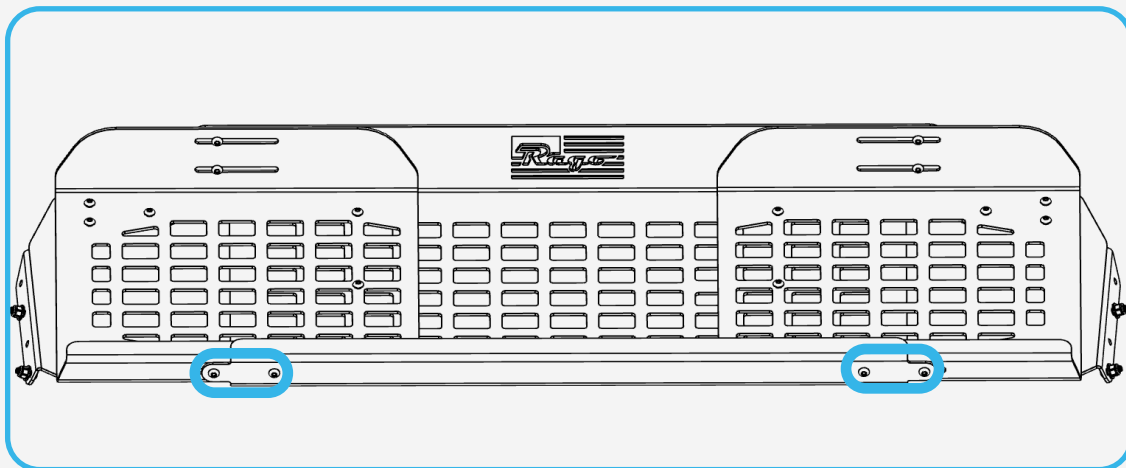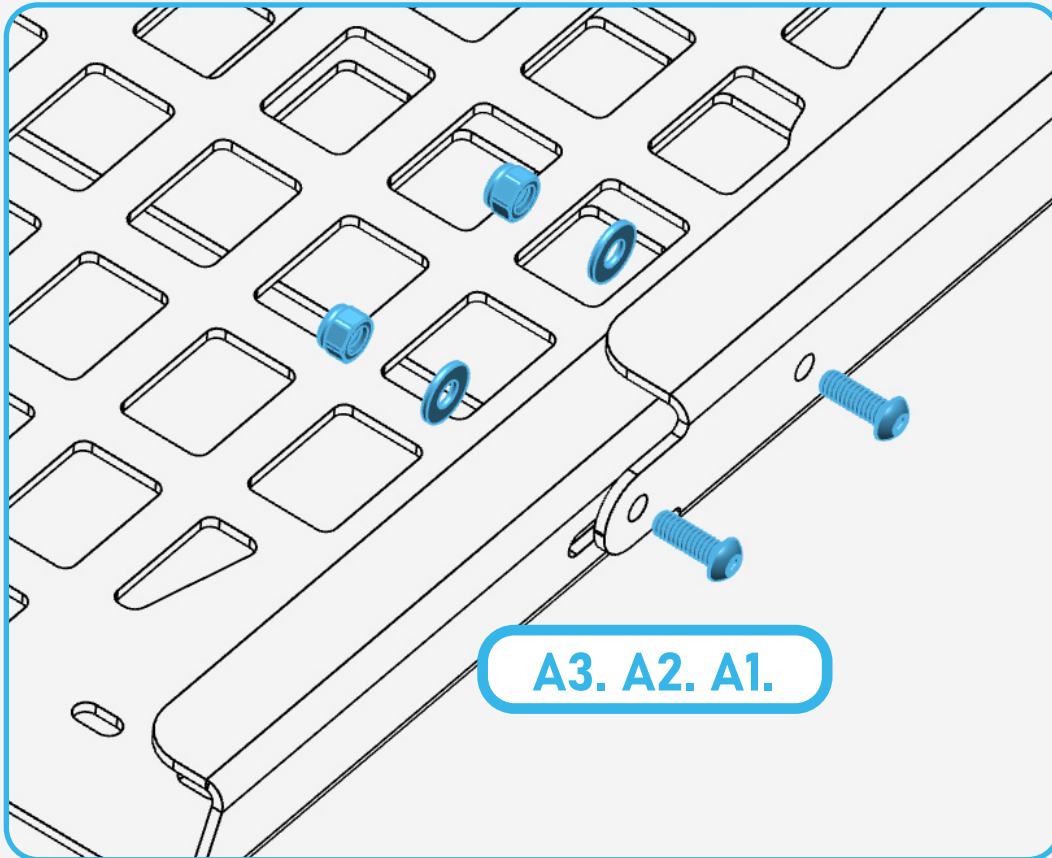



□ STEP 2

Using the provided 1/4" hardware (A, A2, A4), using a (5/32 allen) and a (7/16 wrench). ****Leave loose for adjustments****

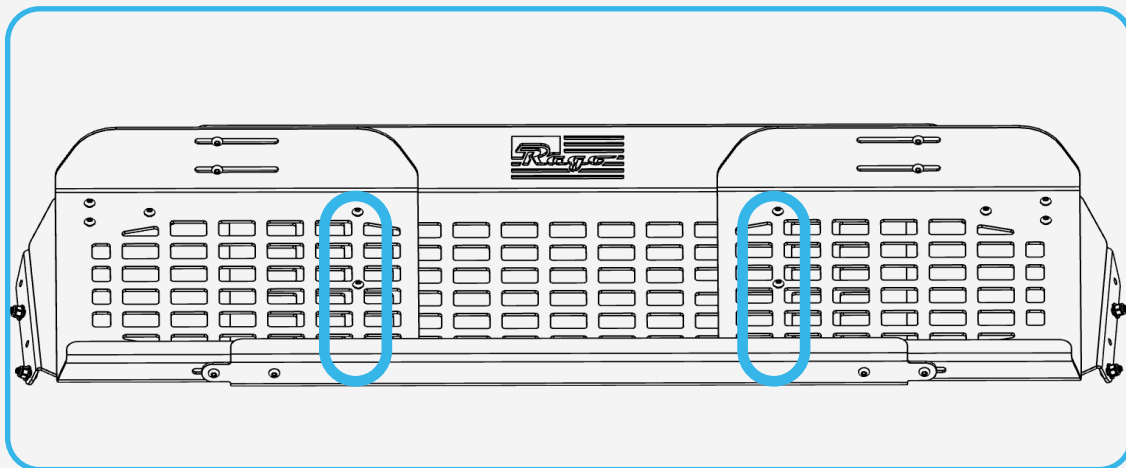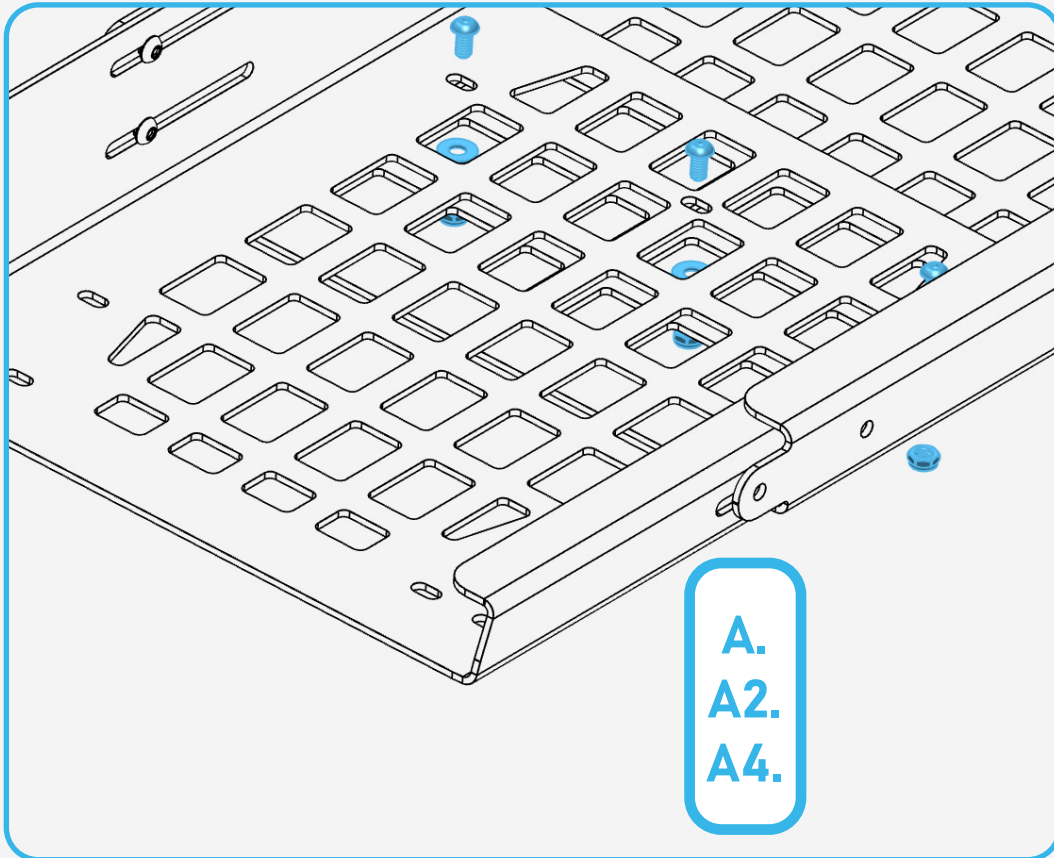

□ STEP 3

Using the provided 1/4" hardware (A, A2, A4), using a (5/32 allen) and a (7/16 wrench). ****Leave loose for adjustments****

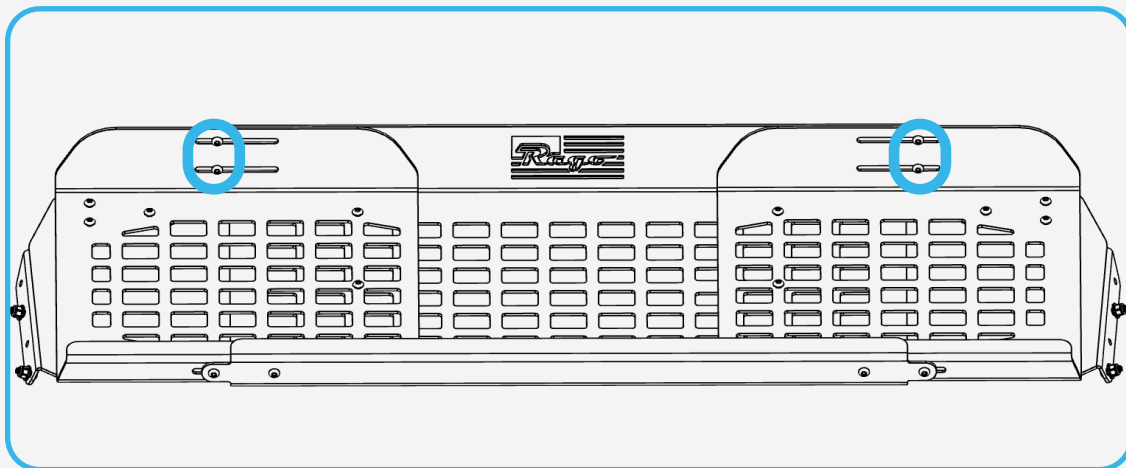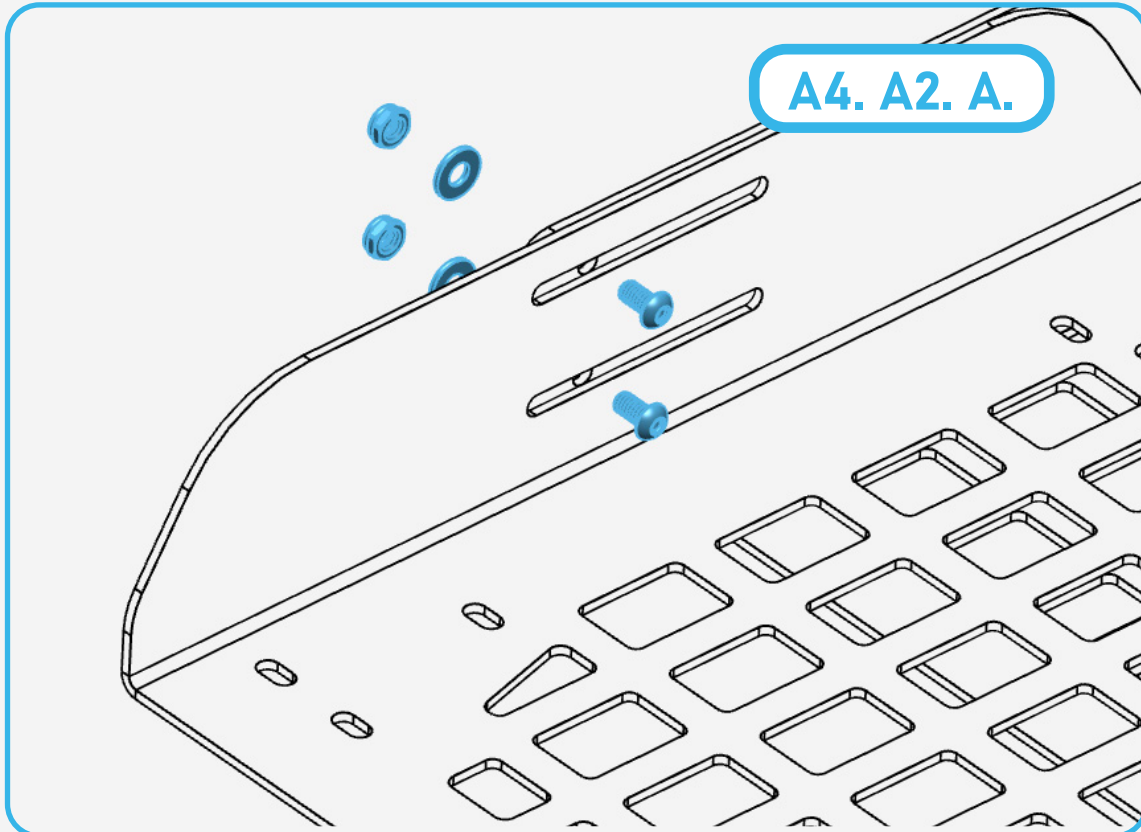

□ STEP 4

Locate the two mounting plate for the shelf and set them to the desired height and install using the provided 1/4" hardware (A1, A2, A3), 5/32 allen and a 7/16 wrench as shown below.



□ STEP 5

Set the shelf onto the mounting brackets and adjust to desired position.



□ STEP 6

With the shelf adjusted use the provided 1/4" hardware (A, A2, A3), 5/32 allen and a 7/16 wrench to secure the shelf to the mounting brackets. Tighten all loose hardware at this time.



A. A2. A3.



STEP 7

Stand back and enjoy your new RAGO Rear Shelf.

Check and re-tighten all mounting bolts after 100 miles and periodically thereafter.

