


DITCH LIGHT MOUNTS 2019-2024/SUBARU FORESTER AC8507701NA

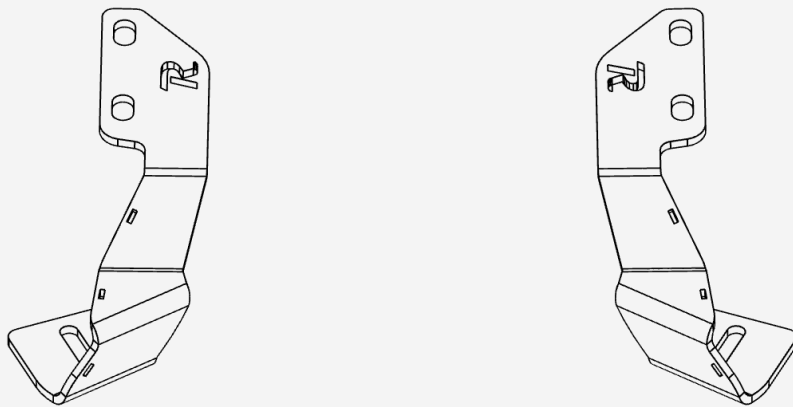

TOOLS REQUIRED

- 12mm Socket



SKILL LEVEL

- Easy



TIME REQUIRED

- Approximately 10 Minutes

(This installation guide covers the installation of the product only. It does not include instructions and time for wiring)

⚠️ WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION ⚠️

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service: 830-896-7571
Rago Fabrication is **not** responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the

performance of these components and the safety of the vehicle. Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

***ALWAYS WEAR EYE PROTECTION
WHEN OPERATING POWER TOOLS***

STEP 1

Mark your hood mount location for reference when installing the ditch mounts.



□ STEP 2

Using a (12mm socket) removed the two OEM nuts indicated below. ****Remove one side at a time****



□ STEP 3

Install the ditch light mount with the hardware removed from **step 2**. Ensure that the hood mount is lined up with the mark made on **step 1**. Repeat on other side.



STEP 4

Stand back and enjoy your new RAGO Ditch Light Mounts.

Check and re-tighten all mounting bolts after 100 miles and periodically thereafter.

