


## ROCK SLIDERS 2024-UP TOYOTA 4RUNNER S77813NA01NA

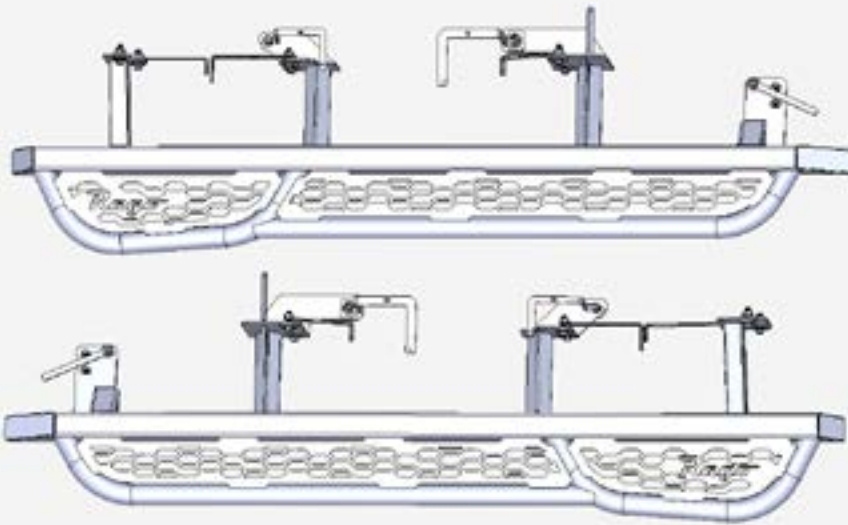

### TOOLS REQUIRED

- 15mm, 14mm Sockets
- 15mm, 14mm Wrench



### SKILL LEVEL

- Easy



### TIME REQUIRED

- Approximately 1.5 Hours

## ⚠ WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION ⚠

**-BEFORE YOU INSTALL THIS KIT-**

**Read and understand all instructions,** warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

**This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.**

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service: 830-896-7571  
Rago Fabrication is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the

performance of these components and the safety of the vehicle. Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

**\*ALWAYS WEAR EYE PROTECTION  
WHEN OPERATING POWER TOOLS\***

## HARDWARE

**A.**



M10-1.25MM X 30MM

QTY: 22

**A1.**



3/8 FLAT WASHER (YELLOW)

QTY: 8

**A2.**



3/8 FLAT WASHER (BLACK)

QTY: 14



## HARDWARE

**B.**



SC41238

QTY: 2

**C.**



SC41237

QTY: 2

**D.**




D1, P1  
QTY: 2

**E.**



D2, P2  
QTY: 2

**F.**

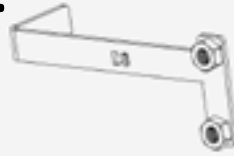

D3, P3  
QTY: 2

**G.**



D4, P4  
QTY: 2

**H.**



HW41236

QTY: 2



## □ STEP 1

Using the provided part (I) slip the nut stick through the hole as shown below.



**STEP 2**

Using hardware (A, A1) and a 15mm wrench loosely secure the rock slider to the frame.



A.  
A1.



## □ STEP 3

With the rock slider loosely secured slide in part (G) and then secure using hardware (A, A1) and a 15mm wrench.




A.  
A1.



## □ STEP 4

Locate part (C, E) and install at the same time through the same slot indicated below. Secure both flag nuts using hardware (A, A1) and a 15mm wrench.

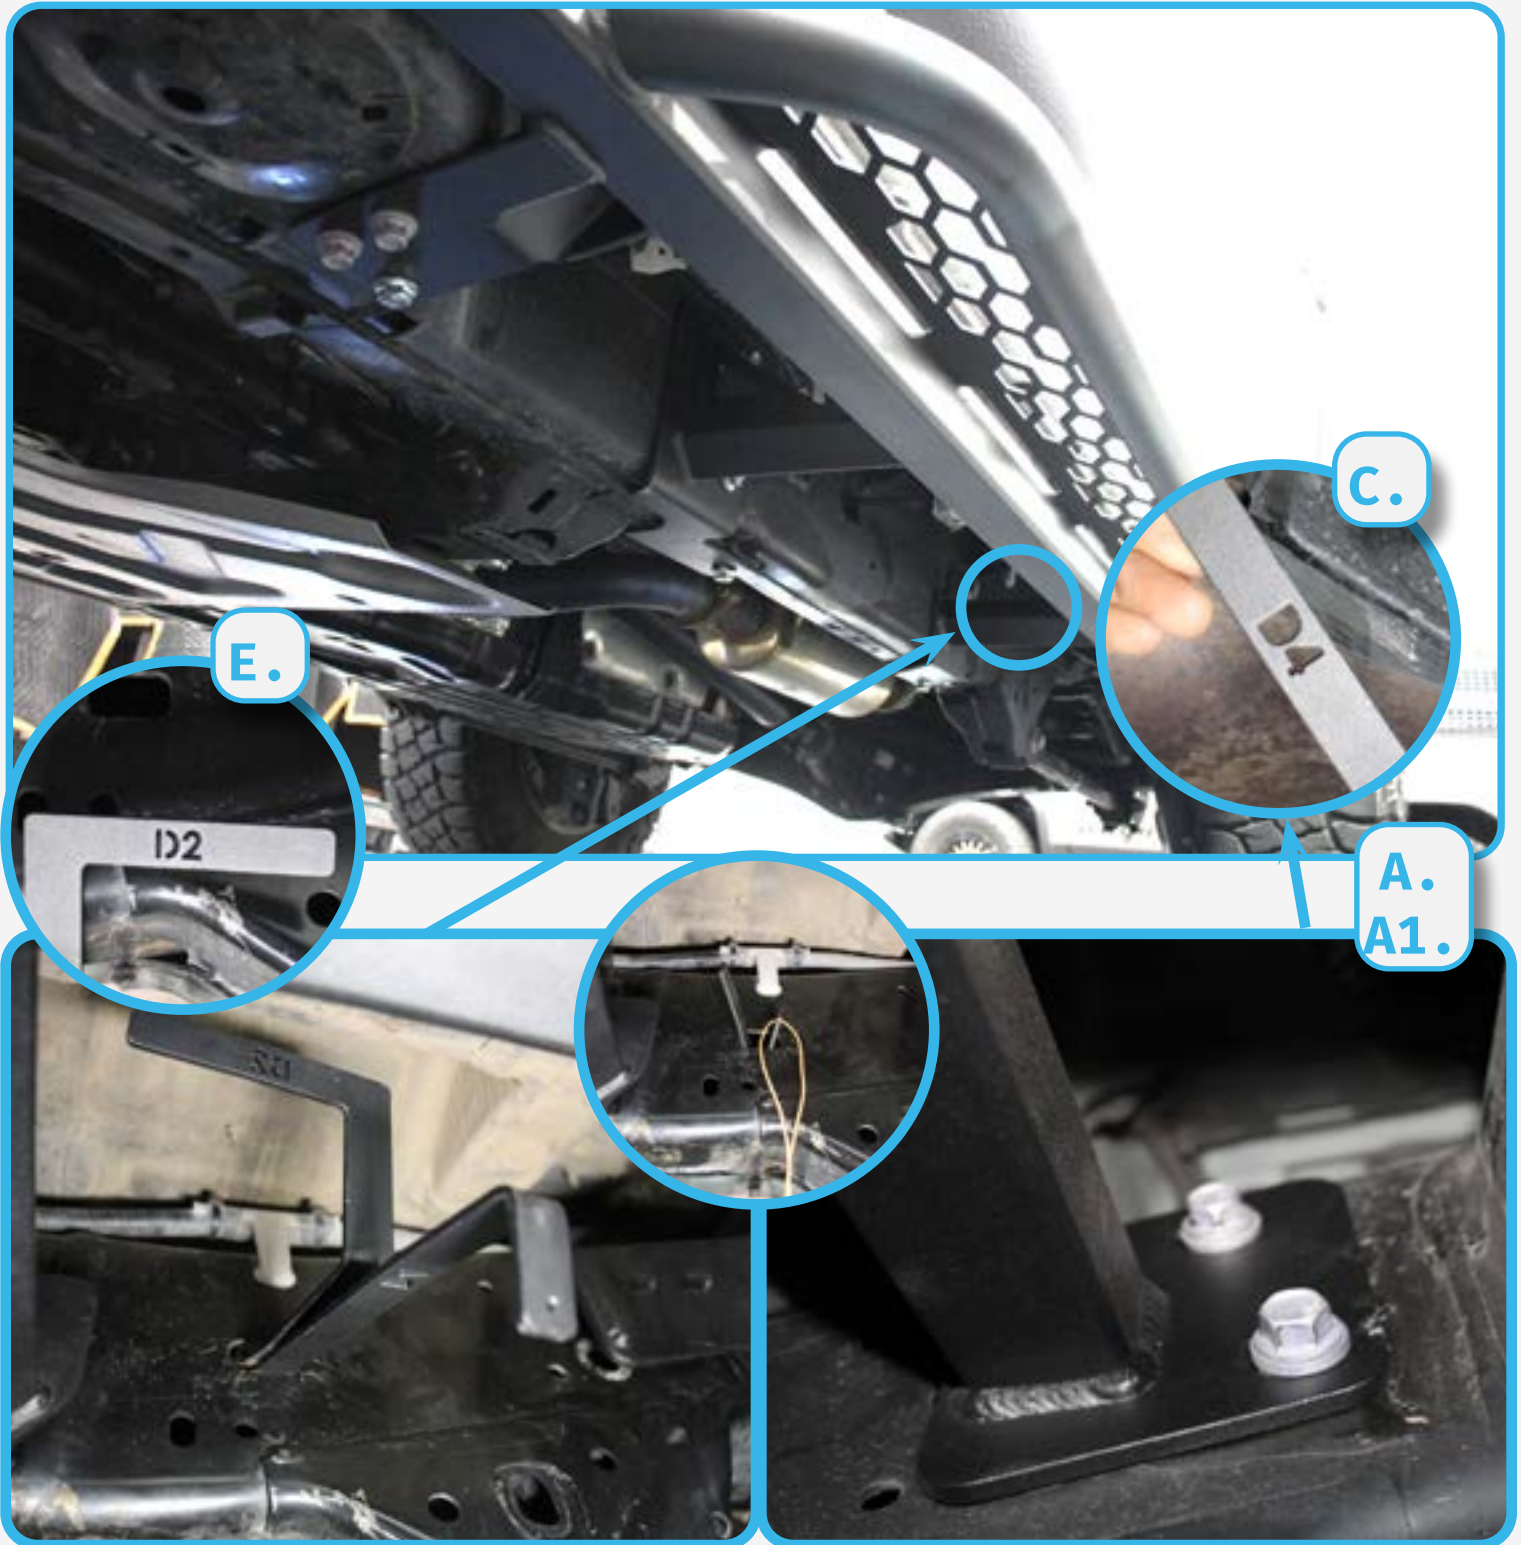





A.  
A1.




## STEP 5

Locate part (D) and slip it through the hole indicated below and secure with hardware (A, A1) and a 15mm wrench.

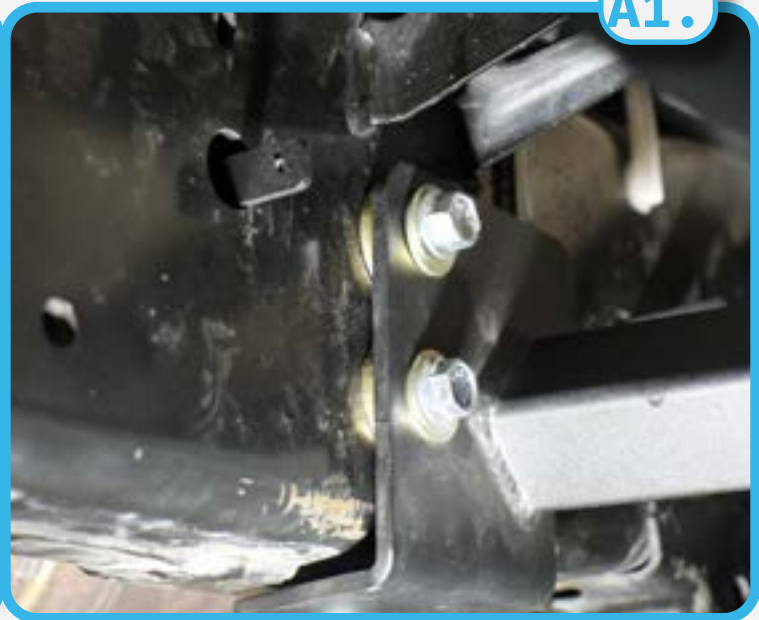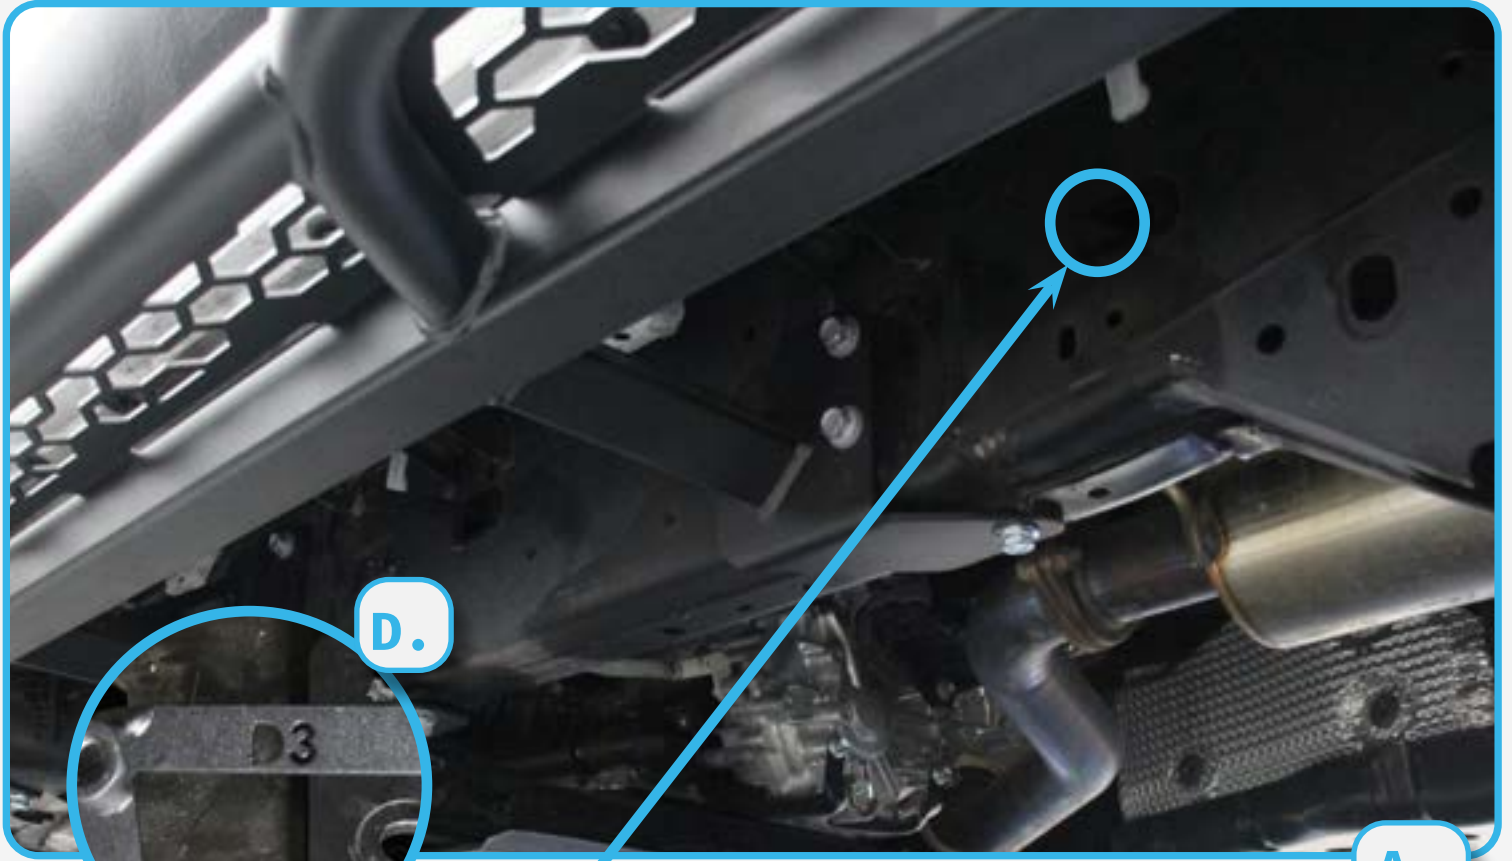

## □ STEP 6

Using part (F) install it through the hole as shown below, then secure it using hardware (A, A1) and a 15mm wrench.

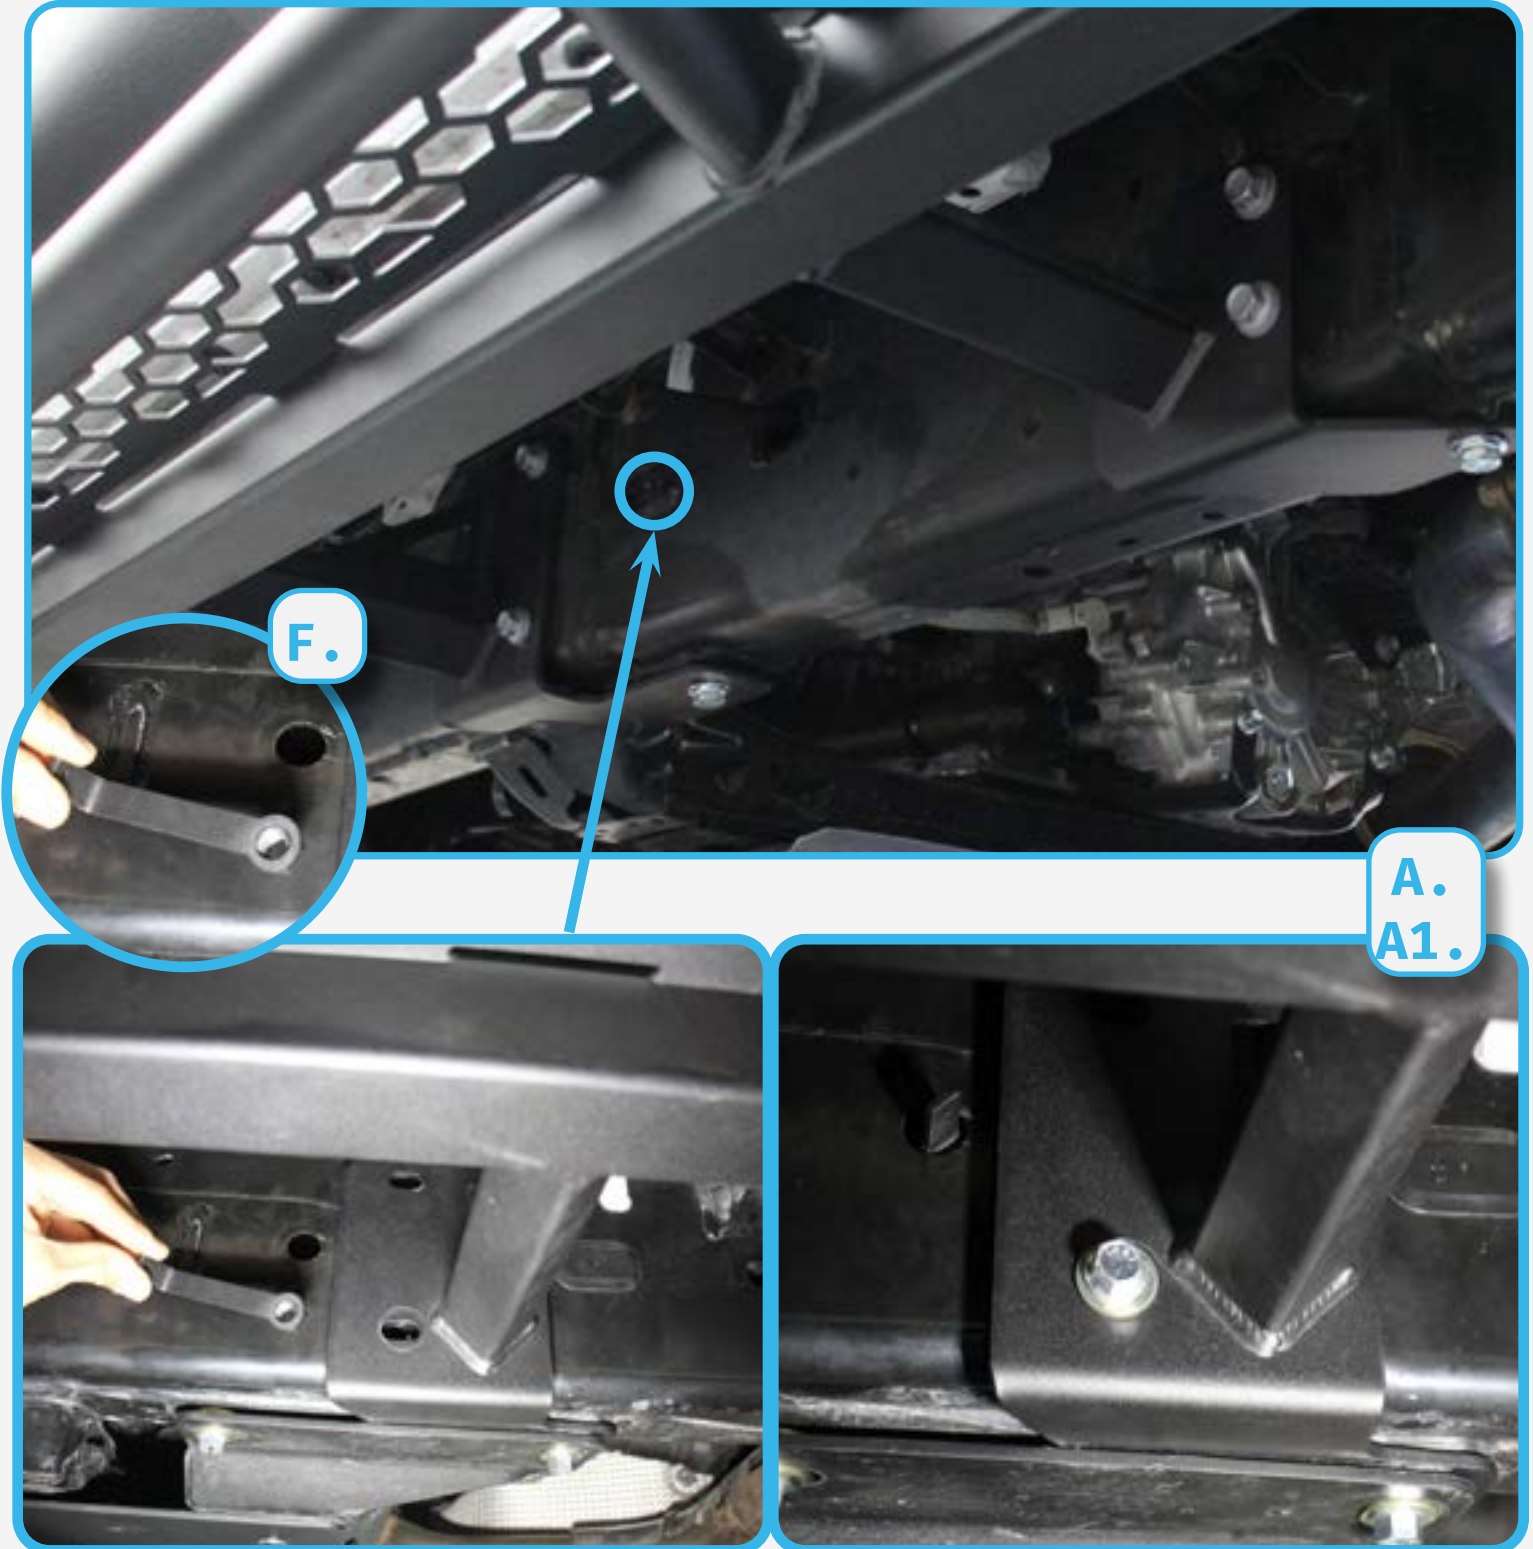

## □ STEP 7

Stand back and enjoy your new RAGO Fabrication Rock Sliders.

Check and re-tighten all mounting hardware after 100 miles and periodically thereafter.

**CHECK OUT OUR FULL LINE OF PRODUCTS AT**  
[www.ragofabrication.com](http://www.ragofabrication.com)

