


REAR STORAGE MOLLE POCKET | PASSENGER 2019-2024 SUBARU FORESTER AC8511701NA

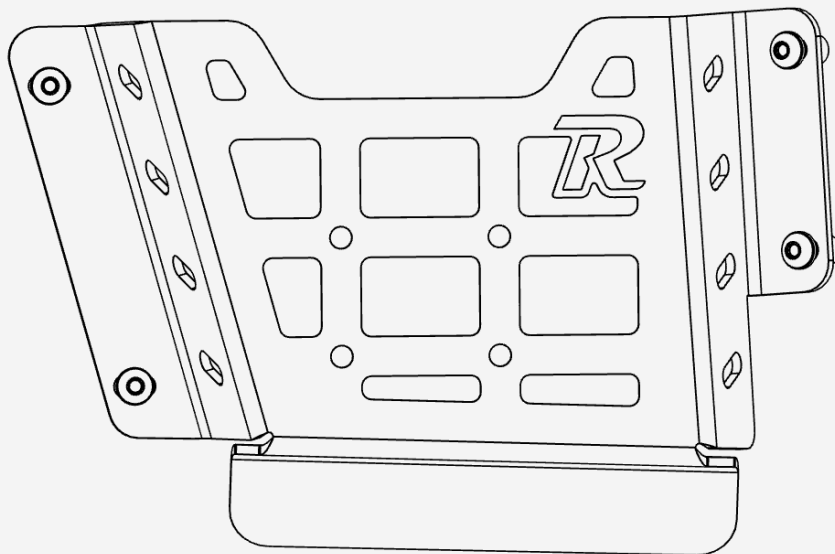

TOOLS REQUIRED

- Rivet Nut Hand Tool
- Step Up Drill Bit
- 5/32 Allen
- Marker

SKILL LEVEL

- Easy

TIME REQUIRED

- Approximately 15 Minutes

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service: 830-896-7571
Rago Fabrication is **not** responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the


performance of these components and the safety of the vehicle. Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

ALWAYS WEAR EYE PROTECTION WHEN OPERATING POWER TOOLS

HARDWARE

A.



1/4-20 X 3/4" BUTTON HEAD BOLT

QTY: 4


A1.



M6 FLAT WASHER

QTY: 4

A2.

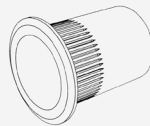

1/4-20 RIVET NUT

QTY: 4



□ STEP 1

Place the rear storage molle in position as shown below and mark the 4x mounting holes. Next using a (Drill) and a (Step Up Drill Bit), Drill a 7/16 hole.



□ STEP 2

Using a (Rivet Nut Hand Tool) install the provided (A2) 1/4" rivet nut into the holes drilled in **step 1**.



□ STEP 3

With the rivet nuts installed, install the molle panel using the provided 1/4" hardware **(A, A1)** using a **(5/32 allen)**.



STEP 4

Stand back and enjoy your new RAGO Rear Storage Molle Pocket.

Check and re-tighten all mounting bolts after 100 miles and periodically thereafter.

